



# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

## General Description

The MAX16068 flash-configurable system manager monitors and manages up to six system voltages simultaneously. The MAX16068 integrates an analog-to-digital converter (ADC). Device configuration information, including overvoltage and undervoltage limits, time delay settings is stored in nonvolatile flash memory. During a fault condition, fault flags and channel voltages can be automatically stored in the nonvolatile flash memory for later readback.

The internal 1% accurate, 10-bit ADC measures each input and compares the result to one overvoltage and one undervoltage limit. A fault signal asserts when a monitored voltage falls outside the set limits.

The MAX16068 supports a power-supply voltage of up to 14V and can be powered directly from the 12V intermediate bus in many systems.

The MAX16068 includes six programmable general-purpose inputs/outputs (GPIOs). GPIOs are flash configurable as a fault output, as a watchdog input or output, or as a manual reset.

The MAX16068 features nonvolatile fault memory for recording information during system shutdown events. The fault logger records a failure in the internal flash and sets a lock bit protecting the stored fault data from accidental erasure.

An SMBus™ or a JTAG serial interface configures the MAX16068. The MAX16068 is available in a 28-pin, 5mm x 5mm, TQFN package and is fully specified over the -40°C to +85°C extended temperature range.

## Features

- ◆ Operates from 2.8V to 14V
- ◆ 1% Accurate, 10-Bit ADC Monitors 6 Voltage Inputs
- ◆ Analog EN Monitoring Input
- ◆ 6 Monitored Inputs with Overvoltage and Undervoltage Limits
- ◆ Nonvolatile Fault Event Logger
- ◆ Six General-Purpose Inputs/Outputs Configurable as:
  - Dedicated Fault Output
  - Watchdog Timer Function
  - Manual Reset
  - SMBus Alert
  - Fault Propagation Input/Output
- ◆ SMBus and JTAG Interface
- ◆ Supports Cascading with MAX16065/MAX16066
- ◆ Flash-Configurable Time Delays and Thresholds
- ◆ -40°C to +85°C Extended Operating Temperature Range

## Applications

Networking Equipment  
Telecom Equipment (Base Stations, Access)  
Storage/RAID Systems  
Servers

*Typical Operating Circuit appears at end of data sheet.*

## Ordering Information/Selector Guide

| PART         | PIN-PACKAGE | VOLTAGE-DETECTOR INPUTS | GENERAL-PURPOSE INPUTS/OUTPUTS |
|--------------|-------------|-------------------------|--------------------------------|
| MAX16068ETI+ | 28 TQFN-EP* | 6                       | 6                              |

**Note:** This device is specified over the -40°C to +85°C extended temperature range.

+Denotes a lead(Pb)-free/RoHS-compliant package.

\*EP = Exposed pad.

SMBus is a trademark of Intel Corp.



Maxim Integrated Products 1

**For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim's website at [www.maxim-ic.com](http://www.maxim-ic.com).**

# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

## ABSOLUTE MAXIMUM RATINGS

|                                        |                                    |
|----------------------------------------|------------------------------------|
| VCC to GND                             | -0.3V to +15V                      |
| MON_, SCL, SDA, A0 to GND              | -0.3V to +6V                       |
| EN, TCK, TMS, TDI to GND               | -0.3V to +4V                       |
| TDO to GND                             | -0.3V to (V <sub>DBP</sub> + 0.3V) |
| RESET, GPIO_                           |                                    |
| (configured as open-drain) to GND      | -0.3V to +6V                       |
| RESET, GPIO_ (configured as push-pull) |                                    |
| to GND                                 | -0.3V to (V <sub>DBP</sub> + 0.3V) |
| DBP, ABP to GND                        | -0.3V to minimum of                |
|                                        | (4V and (VCC + 0.3V))              |
| Continuous Current (all pins)          | ±20mA                              |

\*As per JEDEC 51 Standard, Multilayer Board (PCB).

|                                                       |                 |
|-------------------------------------------------------|-----------------|
| Continuous Power Dissipation (T <sub>A</sub> = +70°C) |                 |
| 28-Pin TQFN (derate 34.5mW/°C above +70°C)            | 2759mW*         |
| Thermal Resistance (Note 1)                           |                 |
| θ <sub>JA</sub>                                       | 29°C/W          |
| θ <sub>JC</sub>                                       | 2°C/W           |
| Operating Temperature Range                           | -40°C to +85°C  |
| Junction Temperature                                  | +150°C          |
| Storage Temperature Range                             | -65°C to +150°C |
| Lead Temperature (soldering, 10s)                     | +300°C          |
| Soldering Temperature (reflow)                        | +260°C          |

**Note 1:** Package thermal resistances were obtained using the method described in JEDEC specification JESD51-7, using a four-layer board. For detailed information on package thermal considerations, refer to [www.maxim-ic.com/thermal-tutorial](http://www.maxim-ic.com/thermal-tutorial).

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

## ELECTRICAL CHARACTERISTICS

(VCC = 2.8V to 14V, T<sub>A</sub> = T<sub>J</sub> = -40°C to +85°C, unless otherwise specified. Typical values are at V<sub>ABP</sub> = V<sub>DBP</sub> = VCC = 3.3V, T<sub>A</sub> = +25°C.) (Note 2)

| PARAMETER                       | SYMBOL            | CONDITIONS                                                        | MIN  | TYP | MAX  | UNITS |
|---------------------------------|-------------------|-------------------------------------------------------------------|------|-----|------|-------|
| Operating Voltage Range         | VCC               | RESET output asserted low                                         | 1.2  |     |      | V     |
|                                 |                   |                                                                   | 2.8  |     | 14   |       |
| Undervoltage Lockout            | VUVLO             | Minimum voltage on VCC to ensure the device is flash configurable |      |     | 2.7  | V     |
| Undervoltage Lockout Hysteresis | UVLOHYS           |                                                                   |      | 55  |      | mV    |
| Minimum Flash Operating Voltage | VFLASH            | Minimum voltage on VCC to ensure flash erase and write operations | 2.7  |     |      | V     |
| Supply Current                  | I <sub>CC1</sub>  | No load on any output                                             |      | 2.8 | 4    | mA    |
|                                 | I <sub>CC2</sub>  | No load on any output, during flash writing cycle                 |      | 7.7 | 14   |       |
|                                 |                   | VCC = V <sub>ABP</sub> = V <sub>DBP</sub> = 3.6V (Note 3)         |      |     | 5    |       |
| DBP Regulator Voltage           | VDBP              | VCC = 5V, C <sub>DBP</sub> = 1μF, no load                         | 2.8  | 3   | 3.2  | V     |
| ABP Regulator Voltage           | VABP              | VCC = 5V, C <sub>ABP</sub> = 1μF, no load                         | 2.85 | 3   | 3.15 | V     |
| Boot Time                       | t <sub>BOOT</sub> | VCC > VUVLO                                                       |      | 100 | 200  | μs    |
| Flash Writing Time              |                   | 8-byte word                                                       |      | 122 |      | ms    |
| Internal Timing Accuracy        |                   | (Note 4)                                                          | -10  |     | +10  | %     |
| <b>ADC</b>                      |                   |                                                                   |      |     |      |       |
| Resolution                      |                   |                                                                   |      | 10  |      | Bits  |
| Gain Error                      | ADCGAIN           | T <sub>A</sub> = +25°C                                            |      |     | 0.35 | %     |
|                                 |                   | T <sub>A</sub> = -40°C to +85°C                                   |      |     | 0.75 |       |
| Offset Error                    | ADCOFF            |                                                                   |      |     | 1.5  | LSB   |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### ELECTRICAL CHARACTERISTICS (continued)

(VCC = 2.8V to 14V, TA = TJ = -40°C to +85°C, unless otherwise specified. Typical values are at VABP = VDBP = VCC = 3.3V, TA = +25°C.) (Note 2)

| PARAMETER                           | SYMBOL               | CONDITIONS                                                     | MIN   | TYP   | MAX   | UNITS |
|-------------------------------------|----------------------|----------------------------------------------------------------|-------|-------|-------|-------|
| Integral Nonlinearity               | ADC <sub>INL</sub>   |                                                                |       |       | 1     | LSB   |
| Differential Nonlinearity           | ADC <sub>DNL</sub>   |                                                                |       |       | 1     | LSB   |
| ADC Total Monitoring Cycle Time     | t <sub>CYCLE</sub>   | Monitoring all 6 inputs, no MON_ fault detected                |       | 24    | 30    | μs    |
| ADC MON_ Ranges                     | ADC <sub>RNG</sub>   | MON_ range set to '00'                                         |       | 5.552 |       | V     |
|                                     |                      | MON_ range set to '01'                                         |       | 2.776 |       |       |
|                                     |                      | MON_ range set to '10'                                         |       | 1.388 |       |       |
| ADC LSB Step Size                   | ADC <sub>LSB</sub>   | MON_ range set to '00'                                         |       | 5.42  |       | mV    |
|                                     |                      | MON_ range set to '01'                                         |       | 2.71  |       |       |
|                                     |                      | MON_ range set to '10'                                         |       | 1.35  |       |       |
| ADC Input Leakage Current           |                      |                                                                |       |       | 1     | μA    |
| <b>ENABLE INPUT (EN)</b>            |                      |                                                                |       |       |       |       |
| EN Input-Voltage Threshold          | V <sub>TH_EN_R</sub> | EN voltage rising                                              |       | 1.24  |       | V     |
|                                     | V <sub>TH_EN_F</sub> | EN voltage falling                                             | 1.195 | 1.215 | 1.235 |       |
| EN Input Current                    | I <sub>EN</sub>      |                                                                | -0.5  |       | +0.5  | μA    |
| EN Input-Voltage Range              |                      |                                                                | 0     |       | 3.6   | V     |
| <b>OUTPUTS (RESET, GPIO_)</b>       |                      |                                                                |       |       |       |       |
| Output-Voltage Low                  | V <sub>OL</sub>      | I <sub>SINK</sub> = 2mA                                        |       |       | 0.4   | V     |
|                                     |                      | I <sub>SINK</sub> = 10mA, GPIO_ only                           |       |       | 0.7   |       |
|                                     |                      | V <sub>CC</sub> = 1.2V, I <sub>SINK</sub> = 100μA (RESET only) |       |       | 0.3   |       |
| Maximum Output Sink Current         |                      | Total current into RESET, GPIO_, V <sub>CC</sub> = 3.3V        |       | 18    |       | mA    |
| Output-Voltage High (Push-Pull)     | V <sub>OH</sub>      | I <sub>SOURCE</sub> = 100μA                                    | 2.4   |       |       | V     |
| Output Leakage Current (Open-Drain) | I <sub>OUT_LKG</sub> |                                                                |       |       | 1     | μA    |
| <b>INPUTS (A0, GPIO_)</b>           |                      |                                                                |       |       |       |       |
| Input Logic-Low                     | V <sub>IL</sub>      |                                                                |       |       | 0.8   | V     |
| Input Logic-High                    | V <sub>IH</sub>      |                                                                | 20    |       |       | V     |
| WDI Pulse Width                     | t <sub>WDI</sub>     |                                                                | 100   |       |       | ns    |
| MR Pulse Width                      | t <sub>MR</sub>      |                                                                | 2     |       |       | μs    |
| <b>SMBus INTERFACE</b>              |                      |                                                                |       |       |       |       |
| Logic-Input Low Voltage             | V <sub>IL</sub>      | Input voltage falling                                          |       |       | 0.8   | V     |
| Logic-Input High Voltage            | V <sub>IH</sub>      | Input voltage rising                                           | 2.0   |       |       | V     |
| Input Leakage Current               |                      | V <sub>CC</sub> shorted to GND, V <sub>MON_</sub> = 0 or 6V    | -1    |       | +1    | μA    |
| Output Sink Current                 | V <sub>OL</sub>      | I <sub>SINK</sub> = 3mA                                        |       |       | 0.4   | V     |
| Input Capacitance                   | C <sub>IN</sub>      |                                                                |       | 5     |       | pF    |

# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

## ELECTRICAL CHARACTERISTICS (continued)

(V<sub>CC</sub> = 2.8V to 14V, T<sub>A</sub> = T<sub>J</sub> = -40°C to +85°C, unless otherwise specified. Typical values are at V<sub>ABP</sub> = V<sub>DBP</sub> = V<sub>CC</sub> = 3.3V, T<sub>A</sub> = +25°C.) (Note 2)

| PARAMETER                                      | SYMBOL               | CONDITIONS                         | MIN      | TYP  | MAX  | UNITS |
|------------------------------------------------|----------------------|------------------------------------|----------|------|------|-------|
| <b>SMBus TIMING</b>                            |                      |                                    |          |      |      |       |
| Serial Clock Frequency                         | f <sub>SCL</sub>     |                                    |          |      | 400  | kHz   |
| Bus Free Time Between STOP and START Condition | t <sub>BUF</sub>     |                                    | 1.3      |      |      | μs    |
| START Condition Setup Time                     | t <sub>SU:STA</sub>  |                                    | 0.6      |      |      | μs    |
| START Condition Hold Time                      | t <sub>HD:STA</sub>  |                                    | 0.6      |      |      | μs    |
| STOP Condition Setup Time                      | t <sub>SU:STO</sub>  |                                    | 0.6      |      |      | μs    |
| Clock Low Period                               | t <sub>LOW</sub>     |                                    | 1.3      |      |      | μs    |
| Clock High Period                              | t <sub>HIGH</sub>    |                                    | 0.6      |      |      | μs    |
| Data Setup Time                                | t <sub>SU:DAT</sub>  |                                    | 100      |      |      | ns    |
| Output Fall Time                               | t <sub>OF</sub>      | 10pF ≤ C <sub>BUS</sub> ≤ 400pF    |          |      | 250  | ns    |
| Data Hold Time                                 | t <sub>HD:DAT</sub>  | From 50% SCL falling to SDA change | Receive  | 0.15 |      | μs    |
|                                                |                      |                                    | Transmit | 0.3  | 0.9  |       |
| Pulse Width of Spike Suppressed                | t <sub>SP</sub>      |                                    |          | 250  |      | ns    |
| SMBus Timeout                                  | t <sub>TIMEOUT</sub> | SMBCLK time low for reset          | 22       |      | 35   | ms    |
| <b>JTAG INTERFACE</b>                          |                      |                                    |          |      |      |       |
| TDI, TMS, TCK Logic-Low Input Voltage          | V <sub>IL</sub>      | Input voltage falling              |          |      | 0.8  | V     |
| TDI, TMS, TCK Logic-High Input Voltage         | V <sub>IH</sub>      | Input voltage rising               | 2.0      |      |      | V     |
| TDO Logic-Output Low Voltage                   | V <sub>OL_TDO</sub>  | I <sub>SINK</sub> = 3mA            |          |      | 0.4  | V     |
| TDO Logic-Output High Voltage                  | V <sub>OH_TDO</sub>  | I <sub>SOURCE</sub> = 200μA        | 2.4      |      |      | V     |
| TDI, TMS Pullup Resistors                      | R <sub>JPU</sub>     | Pullup to DBP                      | 30       | 50   | 65   | kΩ    |
| I/O Capacitance                                | C <sub>I/O</sub>     |                                    |          | 5    |      | pF    |
| TCK Clock Period                               | t <sub>1</sub>       |                                    |          |      | 1000 | ns    |
| TCK High/Low Time                              | t <sub>2, t3</sub>   |                                    | 50       | 500  |      | ns    |
| TCK to TMS, TDI Setup Time                     | t <sub>4</sub>       |                                    | 15       |      |      | ns    |
| TCK to TMS, TDI Hold Time                      | t <sub>5</sub>       |                                    | 15       |      |      | ns    |
| TCK to TDO Delay                               | t <sub>6</sub>       |                                    |          |      | 500  | ns    |
| TCK to TDO High-Z Delay                        | t <sub>7</sub>       |                                    |          |      | 500  | ns    |

**Note 2:** Specifications are guaranteed for the stated global conditions, unless otherwise noted. 100% production tested at T<sub>A</sub> = +25°C and T<sub>A</sub> = +85°C. Specifications at T<sub>A</sub> = -40°C are guaranteed by design.

**Note 3:** For V<sub>CC</sub> of 3.6V or lower, connect V<sub>CC</sub>, DBP, and ABP together. For higher supply applications, connect only V<sub>CC</sub> to the supply rail.

**Note 4:** Applies to RESET (except for a reset timeout period of 25μs), fault, autoretry, sequence delays, and watchdog timeout.

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

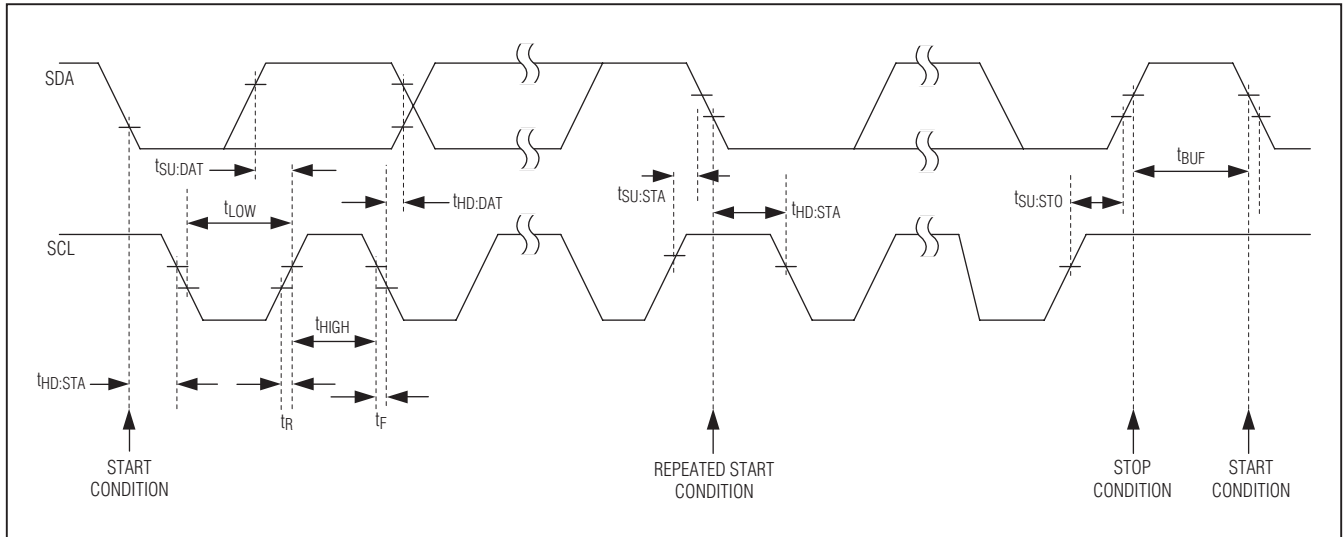


Figure 1. SMBus Timing Diagram







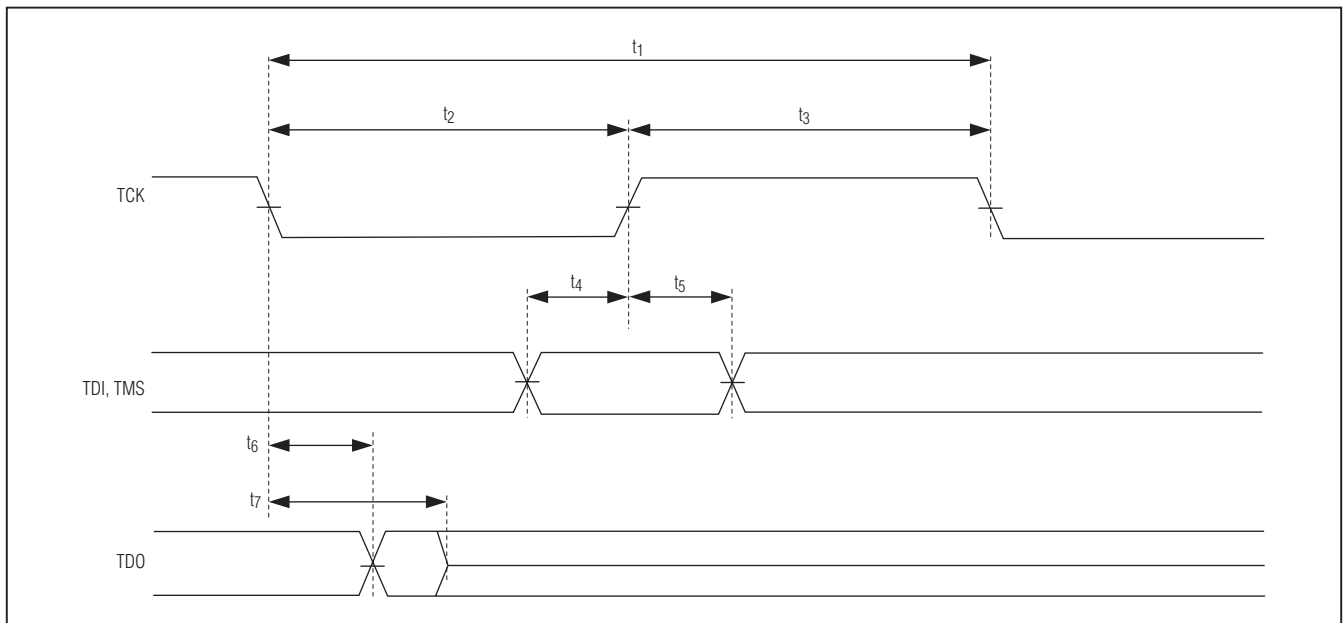


Figure 2. JTAG Timing Diagram

# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

## Typical Operating Characteristics







(Typical values are at  $V_{CC} = 3.3V$ ,  $T_A = +25^\circ C$ .)

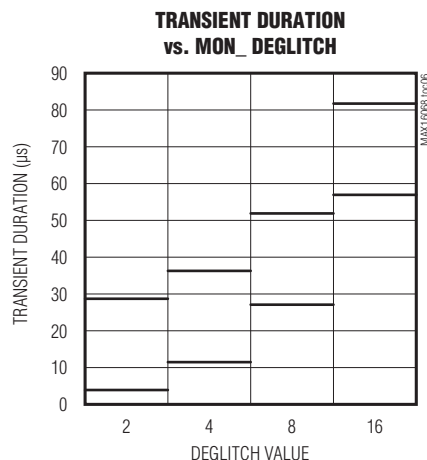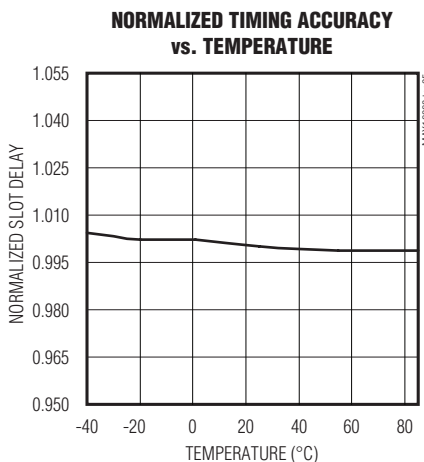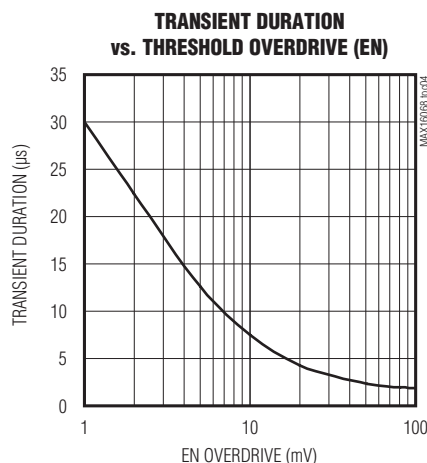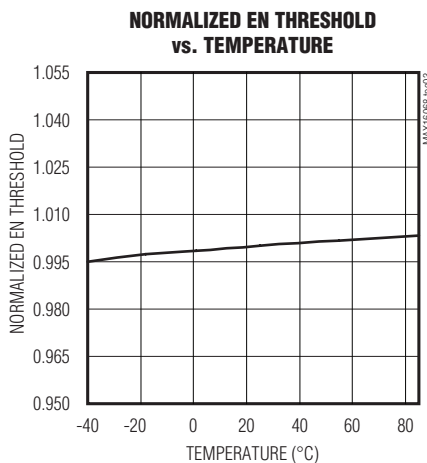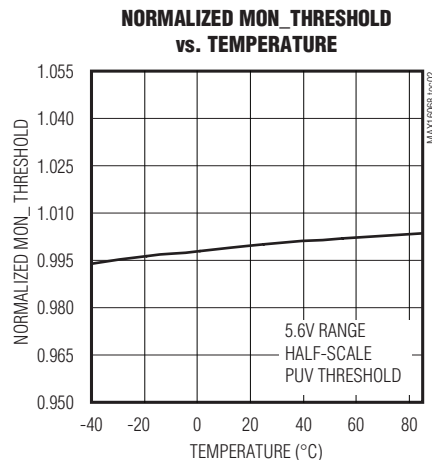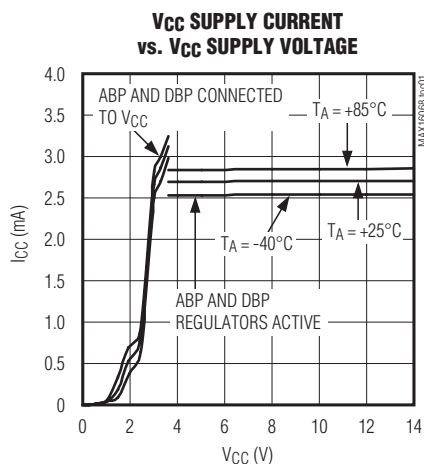

# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers


## Typical Operating Characteristics (continued)

(Typical values are at  $V_{CC} = 3.3V$ ,  $T_A = +25^\circ C$ .)

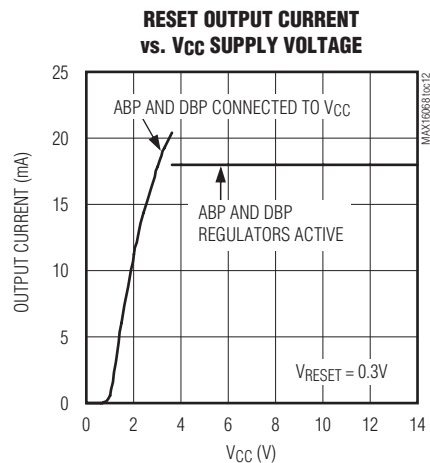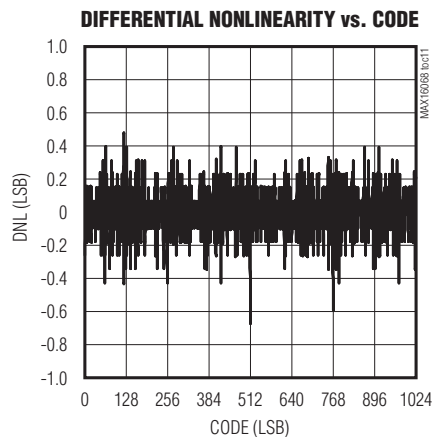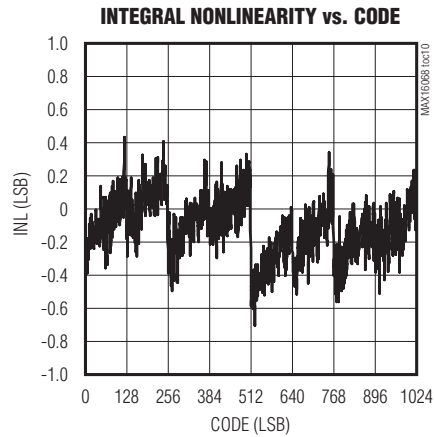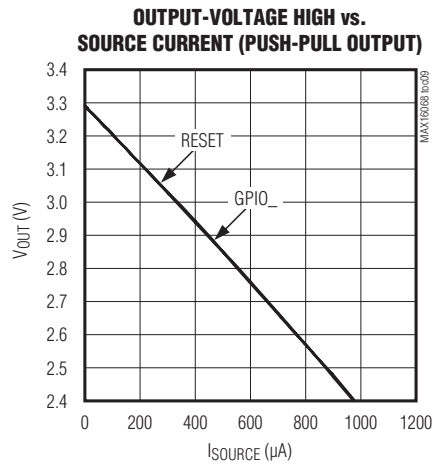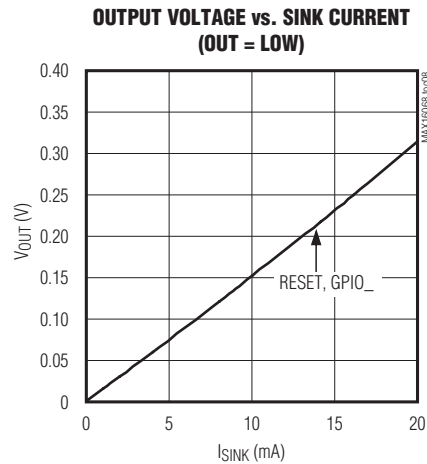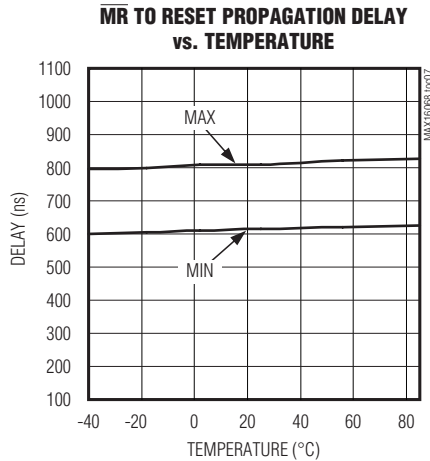

# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

## Pin Configuration

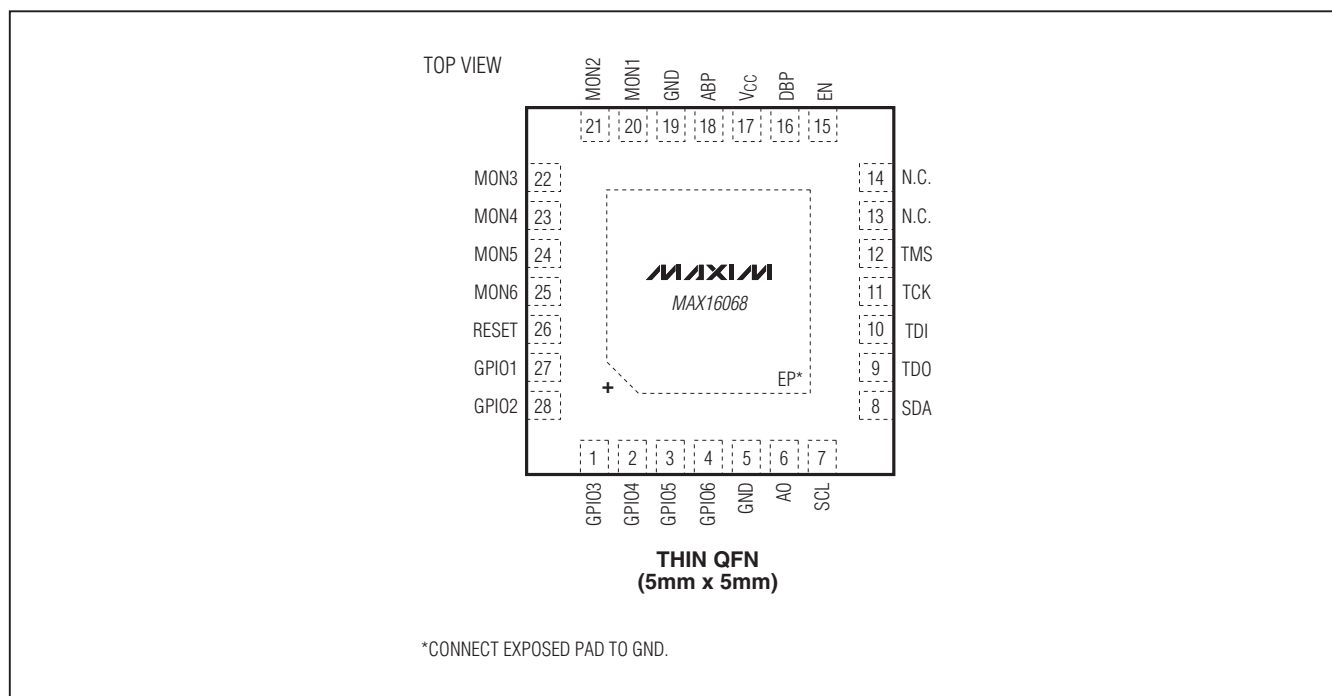

## Pin Description

| PIN         | NAME                      | FUNCTION                                                                                                                                          |
|-------------|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| 1–4, 27, 28 | GPIO3–GPIO6, GPIO1, GPIO2 | General-Purpose Inputs/Outputs. Each GPIO_ can be configured to act as an input, a push-pull output, an open-drain output, or a special function. |
| 5, 19       | GND                       | Ground. Connect all GNDs together.                                                                                                                |
| 6           | A0                        | Four-State SMBus Address. Address is sampled upon POR.                                                                                            |
| 7           | SCL                       | SMBus Serial-Clock Input                                                                                                                          |
| 8           | SDA                       | SMBus Serial-Data Open-Drain Input/Output                                                                                                         |
| 9           | TDO                       | JTAG Test Data Output                                                                                                                             |
| 10          | TDI                       | JTAG Test Data Input                                                                                                                              |
| 11          | TCK                       | JTAG Test Clock                                                                                                                                   |
| 12          | TMS                       | JTAG Test Mode Select                                                                                                                             |
| 13, 14      | N.C.                      | No Connection. Not internally connected.                                                                                                          |
| 15          | EN                        | Analog Enable Input. All outputs deassert when V <sub>EN</sub> is below the enable threshold.                                                     |




# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

MAX16068

## Pin Description (continued)

| PIN   | NAME          | FUNCTION                                                                                                                                                                                              |
|-------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 16    | DBP           | Digital Bypass. All push-pull outputs are referenced to DBP. Bypass DBP with a 1 $\mu$ F capacitor to GND.                                                                                            |
| 17    | VCC           | Power-Supply Input. Bypass VCC to GND with a 10 $\mu$ F ceramic capacitor.                                                                                                                            |
| 18    | ABP           | Analog Bypass. Bypass ABP to GND with a 1 $\mu$ F ceramic capacitor.                                                                                                                                  |
| 20–25 | MON1–<br>MON6 | Monitor Voltage Inputs. Set the monitor voltage range through the configuration registers. Measured values are written to the ADC registers and can be read back through the SMBus or JTAG interface. |
| 26    | RESET         | Configurable Reset Output                                                                                                                                                                             |
| —     | EP            | Exposed Pad. Internally connected to GND. Connect to ground, but do not use EP as the main ground connection.                                                                                         |

## Functional Diagram

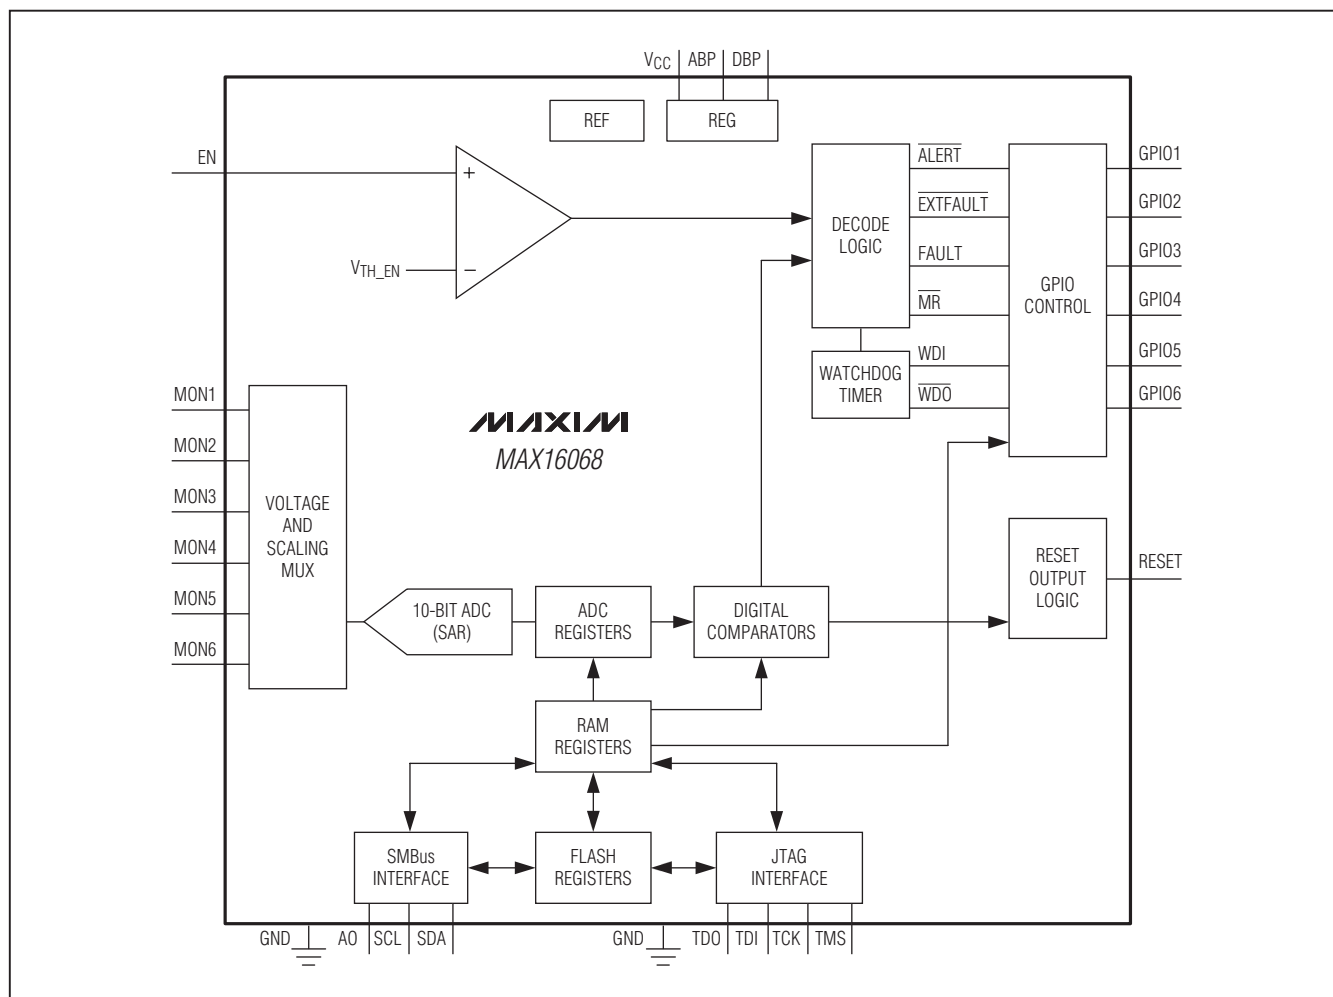

# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

## Detailed Description

The MAX16068 monitors up to six system power supplies. The monitoring phase begins after boot-up if EN is high and the software enable bit is set to '1'. An internal multiplexer cycles through each MON\_ input. At each multiplexer stop, the 10-bit ADC converts the monitored analog voltage to a digital result and stores the result in a register. Each time a conversion cycle (5μs, max) completes, internal logic circuitry compares the conversion results to the overvoltage and undervoltage thresholds stored in memory. When a result violates a programmed threshold, the conversion can be configured to generate a fault. GPIO\_ can be programmed to assert on combinations of faults. Additionally, faults can be configured to trigger the nonvolatile fault logger, which writes all fault information automatically to the flash and write-protects the data to prevent accidental erasure.

The MAX16068 contains both SMBus and JTAG serial interfaces for accessing registers and flash. Use only one interface at any given time. For more information on how to access the internal memory through these interfaces, see the *SMBus-Compatible Serial Interface* and *JTAG Serial Interface* sections. The memory map is divided into three pages with access controlled by special SMBus and JTAG commands.

The factory-default values at POR (power-on reset) for all RAM registers are '0's. POR occurs when VCC reaches the undervoltage-lockout threshold (UVLO) of 2.7V (max). At POR, the device begins a boot-up sequence. During the boot-up sequence, all monitored inputs are masked from initiating faults and flash contents are copied to the respective register locations. During boot-up, the MAX16068 is not accessible through the serial

interface. The boot-up sequence takes up to 150μs, after which the device is ready for normal operation. RESET is asserted low up to the boot-up phase after which it assumes its programmed active state. RESET remains active for its programmed timeout period once all monitored channels are within their respective thresholds. Up to the boot-up phase, the GPIO\_s are high impedance.

## Power

Apply 2.8V to 14V to VCC to power the MAX16068. Bypass VCC to ground with a 10μF capacitor. Two internal voltage regulators, ABP and DBP, supply power to the analog and digital circuitry within the device. For operation at 3.6V or lower, disable the regulators by connecting ABP and DBP to VCC.

ABP is a 3.0V (typ) voltage regulator that powers the internal analog circuitry. Bypass ABP to GND with a 1μF ceramic capacitor installed as close as possible to the device.

DBP is an internal 3.0V (typ) voltage regulator. DBP powers flash and digital circuitry. All push-pull outputs refer to DBP. DBP supplies the input voltage to the internal charge pump when the programmable outputs are configured as charge-pump outputs. Bypass the DBP output to GND with a 1μF ceramic capacitor installed as close as possible to the device.

Do not power external circuitry from ABP or DBP.

## Enable Input (EN)

To enable monitoring, the voltage at EN must be above 1.24V (typ) and the software enable bit in r73h[0] must be set to '1.' To disable monitoring, either pull EN below 1.215V (typ) or set the software enable bit to '0.' See Table 1 for the software enable bit configurations. Connect EN to ABP if not used.

**Table 1. Software Enable Configurations**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                                                                                                                      |
|------------------|---------------|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 73h              | 273h          | [0]       | Software Enable<br>1 = Sequencing enabled<br>0 = Power-down                                                                                                      |
|                  |               | [1]       | Reserved                                                                                                                                                         |
|                  |               | [2]       | 1 = Margin mode enabled                                                                                                                                          |
|                  |               | [3]       | Reserved                                                                                                                                                         |
|                  |               | [4]       | Independent watchdog mode enable<br>1 = Watchdog timer is independent of EN input<br>0 = Watchdog timer boots after EN goes high and the boot-up delay completes |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

When in the monitoring state, and when EN falls below the undervoltage threshold, a register bit, ENRESET (r20h[2]), is set to a '1.' This register bit latches and must be cleared through software. This bit indicates if RESET is asserted low due to EN going under the threshold. The POR state of ENRESET is '0.' The bit is only set on a falling edge of the EN comparator output or the software enable bit. If operating in latch-on fault mode, toggle EN or toggle the software enable bit to clear the latch condition and restart the device once the fault condition has been removed.

Set r73h[2] to '1' to enable monitoring functionality. Faults are not recorded when the device is in margining mode. Set r73h[2] to '0' for normal functionality.

### Voltage Monitoring

The MAX16068 features an internal 10-bit ADC that monitors the MON\_ voltage inputs. An internal multiplexer cycles through each of the enabled inputs, taking less than 24μs for a complete monitoring cycle. Each acquisition takes approximately 4μs. At each multiplexer stop, the 10-bit ADC converts the analog input to a digital result and stores the result in a register. ADC conversion results are stored in registers r00h–r0Bh (see Table 2). Use the SMBus or JTAG serial interface to read ADC conversion results.

The MAX16068 provides six inputs, MON1–MON6, for voltage monitoring. Each input-voltage range is programmable in registers r43h–r44h (see Table 3). When

MON\_ configuration registers are set to '11,' MON\_ voltages are not monitored and the multiplexer does not stop at these inputs, decreasing the total cycle time. These inputs cannot be configured to trigger fault conditions.

The two programmable thresholds for each monitored voltage include an overvoltage and an undervoltage threshold. See the *Faults* section for more information on setting overvoltage and undervoltage thresholds. All voltage thresholds are 8 bits wide. The 8 MSBs of the 10-bit ADC conversion result are compared to these overvoltage and undervoltage thresholds.

For any undervoltage or overvoltage condition to be monitored and any faults detected, the MON\_ input must be assigned to monitoring mode. Inputs that are not enabled are not converted by the ADC; they contain the last value acquired before that channel was disabled. The ADC conversion result registers are reset to 00h at boot-up. These registers are not reset when a reboot command is executed.

To temporarily disable voltage monitoring during voltage margining conditions, set r73h[2] to '1' to enable margining mode functionality. Faults (except for faults triggered by EXTFAULT being pulled low externally) are not recorded when the device is in margining mode, but the ADC continues to run and conversion results continue to be available. Set r73h[2] back to '0' for normal functionality.

**Table 2. ADC Conversion Results (Read Only)**

| REGISTER ADDRESS | BIT RANGE | DESCRIPTION       |
|------------------|-----------|-------------------|
| 00h              | [7:0]     | MON1 result (MSB) |
| 01h              | [7:6]     | MON1 result (LSB) |
| 02h              | [7:0]     | MON2 result (MSB) |
| 03h              | [7:6]     | MON2 result (LSB) |
| 04h              | [7:0]     | MON3 result (MSB) |
| 05h              | [7:6]     | MON3 result (LSB) |
| 06h              | [7:0]     | MON4 result (MSB) |
| 07h              | [7:6]     | MON4 result (LSB) |
| 08h              | [7:0]     | MON5 result (MSB) |
| 09h              | [7:6]     | MON5 result (LSB) |
| 0Ah              | [7:0]     | MON6 result (MSB) |
| 0Bh              | [7:6]     | MON6 result (LSB) |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

Table 3. ADC Configuration Registers

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                                                |
|------------------|---------------|-----------|--------------------------------------------------------------------------------------------|
| 43h              | 243h          | [1:0]     | MON1 Full-Scale Range<br>00 = 5.6V<br>01 = 2.8V<br>10 = 1.4V<br>11 = Channel not converted |
|                  |               | [3:2]     | MON2 Full-Scale Range<br>00 = 5.6V<br>01 = 2.8V<br>10 = 1.4V<br>11 = Channel not converted |
|                  |               | [5:4]     | MON3 Full-Scale Range<br>00 = 5.6V<br>01 = 2.8V<br>10 = 1.4V<br>11 = Channel not converted |
|                  |               | [7:6]     | MON4 Full-Scale Range<br>00 = 5.6V<br>01 = 2.8V<br>10 = 1.4V<br>11 = Channel not converted |
| 44h              | 244h          | [1:0]     | MON5 Full-Scale Range<br>00 = 5.6V<br>01 = 2.8V<br>10 = 1.4V<br>11 = Channel not converted |
|                  |               | [3:2]     | MON6 Full-Scale Range<br>00 = 5.6V<br>01 = 2.8V<br>10 = 1.4V<br>11 = Channel not converted |
|                  |               | [7:4]     | Not used                                                                                   |

### Boot-Up Delay

Once EN is above its threshold and the software enable bit is set, a boot-up delay occurs before monitoring begins. This delay is configured in register r77h as shown in Table 4, and it is stored as an 8-bit value calculated as follows:

$$t_{BOOT} = (5 \times 10^{-6}) \times 2^a \times (16 + b) + 480\mu s$$

where  $t_{BOOT}$  is in seconds,  $a$  is the decimal value of the 4 MSBs and  $b$  is the decimal value of the 4 LSBs.

Table 4. Boot-Up Delay

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION   |
|------------------|---------------|-----------|---------------|
| 77h              | 277h          | [7:0]     | Boot-up delay |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### General-Purpose Inputs/Outputs

GPIO1–GPIO6 are programmable general-purpose inputs/outputs. GPIO1–GPIO6 are configurable as a manual reset input, a watchdog timer input and output, logic inputs/outputs, and fault-dependent outputs. When programmed as outputs, GPIO\_s are open-drain or push-pull. See Tables 5 and 6 for more detailed information on configuring GPIO1–GPIO6.

When GPIO1–GPIO6 are configured as general-purpose inputs/outputs, read values from the GPIO\_ ports through r1Eh and write values to GPIO\_s through r3Eh. Note that r3Eh has a corresponding flash register, which programs the default state of a general-purpose output. See Table 7 for more information on reading and writing to the GPIO\_.

**Table 5. GPIO\_ Configuration Registers**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION         |
|------------------|---------------|-----------|---------------------|
| 3Fh              | 23Fh          | [1:0]     | GPIO1 configuration |
|                  |               | [3:2]     | GPIO2 configuration |
|                  |               | [5:4]     | GPIO3 configuration |
|                  |               | [7:6]     | GPIO4 configuration |
| 40h              | 240h          | [1:0]     | GPIO5 configuration |
|                  |               | [3:2]     | GPIO6 configuration |
|                  |               | [4]       | ARAEN bit           |
|                  |               | [7:5]     | Not used            |

**Table 6. GPIO\_ Function Configuration Bits**

|    | GPIO1                                  | GPIO2                     | GPIO3                        | GPIO4                     | GPIO5                     | GPIO6                     |
|----|----------------------------------------|---------------------------|------------------------------|---------------------------|---------------------------|---------------------------|
| 00 | Logic input                            | Logic input               | Logic input                  | Logic input               | Logic input               | Logic input               |
| 01 | Logic output (push-pull)               | Logic output (push-pull)  | Logic output (push-pull)     | Logic output (push-pull)  | Logic output (push-pull)  | Logic output (push-pull)  |
| 10 | Logic output (open drain)              | Logic output (open drain) | Logic output (open drain)    | Logic output (open drain) | Logic output (open drain) | Logic output (open drain) |
| 11 | $\overline{\text{ALERT}}$ (open drain) | FAULT (open drain)        | $\overline{\text{MR}}$ input | WDI                       | WDO (open drain)          | EXTFAULT (open drain)     |

**Table 7. GPIO\_ State Registers**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION        |
|------------------|---------------|-----------|--------------------|
| 1Eh              | —             | [0]       | GPIO1 input state  |
|                  |               | [1]       | GPIO2 input state  |
|                  |               | [2]       | GPIO3 input state  |
|                  |               | [3]       | GPIO4 input state  |
|                  |               | [4]       | GPIO5 input state  |
|                  |               | [5]       | GPIO6 input state  |
|                  |               | [7:6]     | Not used           |
| 3Eh              | 23Eh          | [0]       | GPIO1 output state |
|                  |               | [1]       | GPIO2 output state |
|                  |               | [2]       | GPIO3 output state |
|                  |               | [3]       | GPIO4 output state |
|                  |               | [4]       | GPIO5 output state |
|                  |               | [5]       | GPIO6 output state |
|                  |               | [7:6]     | Not used           |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### ALERT

GPIO1 is configurable as the SMBus alert signal, ALERT. ALERT asserts when any fault condition occurs. When the SMBus host sends the ARA (Alert Response Address), the MAX16068 responds with its slave address and deasserts ALERT. ALERT is an open-drain output.

Set the ARAEN bit in r40h[4] to '1' to disable the ARA feature. Under these conditions, the device does not respond to an ARA on the SMBus line.

### FAULT

GPIO2 is configurable as a dedicated fault output, FAULT. FAULT asserts when an overvoltage or undervoltage condition occurs on the selected inputs. FAULT dependencies are set using registers r36h and r37h (see Table 8). When FAULT depends on more than one MON, the fault output asserts when one or more MON exceeds a programmed threshold voltage. FAULT acts independently of the critical fault system, described in the *Critical Faults* section. Use r37h[7] to set the polarity of FAULT.

### Manual Reset (MR)

GPIO3 is configurable to act as an active-low manual reset input, MR. Drive MR low to assert RESET. RESET remains asserted for the selected reset timeout period after MR transitions from low to high. When connecting MR to a push-button, use a pullup resistor. See the *Reset Output* section for more information on selecting a reset timeout period.

### Watchdog Input (WDI) and Output (WDO)

GPIO4 and GPIO5 are configurable as the watchdog timer input (WDI) and output, WDO, respectively. See Table 16 for configuration details. WDO is an open-drain, active-low output. See the *Watchdog Timer* section for more information about the operation of the watchdog timer.

### External Fault (EXTFAULT)

GPIO6 is configurable as the external fault input/output, EXTFAULT. EXTFAULT asserts if any monitored voltage exceeds an overvoltage or undervoltage threshold. EXTFAULT also asserts if a power-up or power-down sequencing fault occurs. This signal can be used to cascade multiple MAX16068s.

For the MAX16068, if register bit r6Dh[2] is set in addition to r72h[5], EXTFAULT going low triggers a nonvolatile fault log operation.

**Table 8. FAULT Dependencies**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                                             |
|------------------|---------------|-----------|-----------------------------------------------------------------------------------------|
| 36h              | 236h          | [0]       | FAULT depends on MON1 undervoltage threshold                                            |
|                  |               | [1]       | FAULT depends on MON2 undervoltage threshold                                            |
|                  |               | [2]       | FAULT depends on MON3 undervoltage threshold                                            |
|                  |               | [3]       | FAULT depends on MON4 undervoltage threshold                                            |
|                  |               | [4]       | FAULT depends on MON5 undervoltage threshold                                            |
|                  |               | [5]       | FAULT depends on MON6 undervoltage threshold                                            |
|                  |               | [7:6]     | Not used                                                                                |
| 37h              | 237h          | [0]       | FAULT depends on MON1 overvoltage threshold                                             |
|                  |               | [1]       | FAULT depends on MON2 overvoltage threshold                                             |
|                  |               | [2]       | FAULT depends on MON3 overvoltage threshold                                             |
|                  |               | [3]       | FAULT depends on MON4 overvoltage threshold                                             |
|                  |               | [4]       | FAULT depends on MON5 overvoltage threshold                                             |
|                  |               | [5]       | FAULT depends on MON6 overvoltage threshold                                             |
|                  |               | [6]       | Not used                                                                                |
|                  |               | [7]       | 0 = FAULT is an active-low digital output<br>1 = FAULT is an active-high digital output |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Faults

The MAX16068 monitors the input (MON\_) channels and compares the results with an overvoltage threshold and an undervoltage threshold. Based on these conditions, the MAX16068 asserts various fault outputs and save specific information about the channel conditions and voltages into the nonvolatile flash. Once a critical fault event occurs, the failing channel condition, ADC conversions at the time of the fault, or both can be saved by configuring the event logger. The event logger records a single failure in the internal flash and sets a lock bit that protects the stored fault data from accidental erasure on a subsequent power-up.

The MAX16068 is capable of measuring overvoltage and undervoltage fault events. Fault conditions are detected at the end of each ADC conversion. An overvoltage event occurs when the voltage at a monitored input exceeds the overvoltage threshold for that input. An undervoltage event occurs when the voltage at a monitored input falls below the undervoltage threshold. Fault thresholds are set in registers r49h–r59h as shown in Table 9. Disabled inputs are not monitored for fault conditions and are skipped over by the input multiplexer. Only the upper 8 bits of a conversion result are compared with the programmed fault thresholds.

**Table 9. Fault Threshold Registers**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                 |
|------------------|---------------|-----------|-----------------------------|
| 48h              | 248h          | [7:0]     | Not used                    |
| 49h              | 249h          | [7:0]     | MON1 overvoltage threshold  |
| 4Ah              | 24Ah          | [7:0]     | MON1 undervoltage threshold |
| 4Bh              | 24Bh          | [7:0]     | Not used                    |
| 4Ch              | 24Ch          | [7:0]     | MON2 overvoltage threshold  |
| 4Dh              | 24Dh          | [7:0]     | MON2 undervoltage threshold |
| 4Eh              | 24Eh          | [7:0]     | Not used                    |
| 4Fh              | 24Fh          | [7:0]     | MON3 overvoltage threshold  |
| 50h              | 250h          | [7:0]     | MON3 undervoltage threshold |
| 51h              | 251h          | [7:0]     | Not used                    |
| 52h              | 252h          | [7:0]     | MON4 overvoltage threshold  |
| 53h              | 253h          | [7:0]     | MON4 undervoltage threshold |
| 54h              | 254h          | [7:0]     | Not used                    |
| 55h              | 255h          | [7:0]     | MON5 overvoltage threshold  |
| 56h              | 256h          | [7:0]     | MON5 undervoltage threshold |
| 57h              | 257h          | [7:0]     | Not used                    |
| 58h              | 258h          | [7:0]     | MON6 overvoltage threshold  |
| 59h              | 259h          | [7:0]     | MON6 undervoltage threshold |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Deglitch

Fault conditions are detected at the end of each conversion. When the voltage on an input falls outside a monitored threshold for one acquisition, the input multiplexer remains on that channel and performs several successive conversions. To trigger a fault, the input must stay outside the threshold for a certain number of acquisitions as determined by the deglitch setting in r74h[6:5] (see Table 10).

### Fault Flags

Fault flags indicate the fault status of a particular input. The fault flag of any monitored input in the device can be read at any time from registers r1Bh and r1Ch, as shown in Table 11. Clear a fault flag by writing a '1' to the appropriate bit in the flag register. Unlike the fault signals sent to the fault outputs, these bits are masked by the critical fault enable bits (see Table 12). The fault flag is only set when the matching enable bit in the critical fault enable register is also set.

**Table 10. Deglitch Configuration**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                                                                    |
|------------------|---------------|-----------|----------------------------------------------------------------------------------------------------------------|
| 74h              | 274h          | [6:5]     | Voltage Comparator Deglitch Configuration<br>00 = 2 cycles<br>01 = 4 cycles<br>10 = 8 cycles<br>11 = 16 cycles |

**Table 11. Fault Flags**

| REGISTER ADDRESS | BIT RANGE | DESCRIPTION                 |
|------------------|-----------|-----------------------------|
| 1Bh              | [0]       | MON1 undervoltage threshold |
|                  | [1]       | MON2 undervoltage threshold |
|                  | [2]       | MON3 undervoltage threshold |
|                  | [3]       | MON4 undervoltage threshold |
|                  | [4]       | MON5 undervoltage threshold |
|                  | [5]       | MON6 undervoltage threshold |
|                  | [7:6]     | Reserved                    |
| 1Ch              | [0]       | MON1 overvoltage threshold  |
|                  | [1]       | MON2 overvoltage threshold  |
|                  | [2]       | MON3 overvoltage threshold  |
|                  | [3]       | MON4 overvoltage threshold  |
|                  | [4]       | MON5 overvoltage threshold  |
|                  | [5]       | MON6 overvoltage threshold  |
|                  | [6]       | External fault (EXTFAULT)   |
|                  | [7]       | SMB alert                   |



## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

If GPIO6 is configured as the  $\overline{\text{EXTFAULT}}$  input/output and  $\overline{\text{EXTFAULT}}$  is pulled low by an external circuit, bit r1Ch[6] is set.

The SMB Alert ( $\overline{\text{ALERT}}$ ) bit is set if the MAX16068 has asserted the SMBus Alert output. Clear by writing a '1'. See the *SMBALERT* ( $\overline{\text{ALERT}}$ ) section for more details.

### Critical Faults

During normal operation, a fault condition can be stored in the flash memory by setting the appropriate critical fault enable bits. Set the appropriate critical fault enable bits in registers r6Eh–r72h (see Table 12) for a fault condition to trigger a critical fault.

**Table 12. Critical Fault Configuration**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                                                                                                                                                                                                                                                     |
|------------------|---------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6Dh              | 26Dh          | [1:0]     | Fault Information to Log<br>00 = Save failed line flags and ADC values in flash<br>01 = Save only failed line flags in flash<br>10 = Save only ADC values in flash<br>11 = Do not save anything                                                                                                 |
|                  |               | [2]       | 1 = Fault log triggered when $\overline{\text{EXTFAULT}}$ is pulled low externally                                                                                                                                                                                                              |
|                  |               | [7:3]     | Not used                                                                                                                                                                                                                                                                                        |
| 6Eh              | 26Eh          | [0]       | 1 = Fault log triggered when MON1 is below its undervoltage threshold                                                                                                                                                                                                                           |
|                  |               | [1]       | 1 = Fault log triggered when MON2 is below its undervoltage threshold                                                                                                                                                                                                                           |
|                  |               | [2]       | 1 = Fault log triggered when MON3 is below its undervoltage threshold                                                                                                                                                                                                                           |
|                  |               | [3]       | 1 = Fault log triggered when MON4 is below its undervoltage threshold                                                                                                                                                                                                                           |
|                  |               | [4]       | 1 = Fault log triggered when MON5 is below its undervoltage threshold                                                                                                                                                                                                                           |
|                  |               | [5]       | 1 = Fault log triggered when MON6 is below its undervoltage threshold                                                                                                                                                                                                                           |
|                  |               | [7:6]     | Not used                                                                                                                                                                                                                                                                                        |
| 6Fh              | 26Fh          | [3:0]     | Not used                                                                                                                                                                                                                                                                                        |
|                  |               | [4]       | 1 = Fault log triggered when MON1 is above its overvoltage threshold                                                                                                                                                                                                                            |
|                  |               | [5]       | 1 = Fault log triggered when MON2 is above its overvoltage threshold                                                                                                                                                                                                                            |
|                  |               | [6]       | 1 = Fault log triggered when MON3 is above its overvoltage threshold                                                                                                                                                                                                                            |
|                  |               | [7]       | 1 = Fault log triggered when MON4 is above its overvoltage threshold                                                                                                                                                                                                                            |
| 70h              | 270h          | [0]       | 1 = Fault log triggered when MON5 is above its overvoltage threshold                                                                                                                                                                                                                            |
|                  |               | [1]       | 1 = Fault log triggered when MON6 is above its overvoltage threshold                                                                                                                                                                                                                            |
|                  |               | [7:2]     | Not used                                                                                                                                                                                                                                                                                        |
| 71h              | 271h          | [7:0]     | Not used                                                                                                                                                                                                                                                                                        |
| 72h              | 272h          | [4:0]     | Not used                                                                                                                                                                                                                                                                                        |
|                  |               | [5]       | 1 = $\overline{\text{EXTFAULT}}$ pulled low externally causes the device to stop monitoring until EN is toggled or the autoretry delay expires (see <i>Autoretry/Latch Mode</i> section)<br>0 = $\overline{\text{EXTFAULT}}$ pulled low externally does not cause the device to stop monitoring |
|                  |               | [7:6]     | Not used                                                                                                                                                                                                                                                                                        |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

Logged fault information is stored in flash registers r200h–r208h (see Table 13). After fault information is logged, the flash is locked and must be unlocked to enable a new fault log to be stored. Write a '0' to r8Ch[1] to unlock the configuration flash. Fault information can be configured to store ADC conversion results and/or fault flags in registers. Select the critical fault configuration in r6Dh[1:0]. Set r6Dh[1:0] to '11' to turn off the fault logger. All stored ADC results are 8 bits wide (MSBs of the conversion).

### Autoretry/Latch Mode

The MAX16068 can be configured for one of two fault management methods: autoretry or latch-on-fault. Set r74h[4:3] to '00' to select the latch-on-fault mode. The device does not reinitiate monitoring until EN is toggled or the software enable bit is toggled. See the *Enable Input (EN)* section for more information on setting the software enable bit.

**Table 13. Nonvolatile Fault Log Registers**

| FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                          |
|---------------|-----------|----------------------------------------------------------------------|
| 200h          | [7:0]     | Reserved                                                             |
| 201h          | [0]       | Fault log triggered on MON1 falling below its undervoltage threshold |
|               | [1]       | Fault log triggered on MON2 falling below its undervoltage threshold |
|               | [2]       | Fault log triggered on MON3 falling below its undervoltage threshold |
|               | [3]       | Fault log triggered on MON4 falling below its undervoltage threshold |
|               | [4]       | Fault log triggered on MON5 falling below its undervoltage threshold |
|               | [5]       | Fault log triggered on MON6 falling below its undervoltage threshold |
|               | [7:6]     | Not used                                                             |
| 202h          | [0]       | Fault log triggered on MON1 exceeding its overvoltage threshold      |
|               | [1]       | Fault log triggered on MON2 exceeding its overvoltage threshold      |
|               | [2]       | Fault log triggered on MON3 exceeding its overvoltage threshold      |
|               | [3]       | Fault log triggered on MON4 exceeding its overvoltage threshold      |
|               | [4]       | Fault log triggered on MON5 exceeding its overvoltage threshold      |
|               | [5]       | Fault log triggered on MON6 exceeding its overvoltage threshold      |
|               | [6]       | Fault log triggered on EXTFAULT                                      |
|               | [7]       | Not used                                                             |
| 203h          | [7:0]     | MON1 ADC output (8 MSBs)                                             |
| 204h          | [7:0]     | MON2 ADC output (8 MSBs)                                             |
| 205h          | [7:0]     | MON3 ADC output (8 MSBs)                                             |
| 206h          | [7:0]     | MON4 ADC output (8 MSBs)                                             |
| 207h          | [7:0]     | MON5 ADC output (8 MSBs)                                             |
| 208h          | [7:0]     | MON6 ADC output (8 MSBs)                                             |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

Set r74h[4:3] to a value other than '00' to select autoretry mode (see Table 14). In this configuration, the device stops monitoring after a critical fault event then monitors again following the boot-up delay plus 20ms (see the *Boot-Up Delay* section). Use r74h[2:0] to select an autoretry delay from 20ms to 1.6s. See Table 14 for more information on setting the autoretry delay.

When fault information is stored in flash (see the *Critical Faults* section) and autoretry mode is selected, set an autoretry delay greater than the time required for the storing operation. When fault information is stored in flash and latch-on-fault mode is chosen, toggle EN or reset the software enable bit only after the completion of the storing operation. When saving information about the failed lines only, ensure a delay of at least 102ms before the restart procedure. Otherwise, ensure a minimum 153ms timeout, to ensure that ADC conversions are completed and values are stored correctly in flash.

### Reset Output

The reset output, RESET, indicates the status of the monitored inputs. It asserts during the boot phase and deasserts following the reset timeout period once the monitored input voltage is within the undervoltage/overvoltage.

During normal monitoring, RESET can be configured to assert when any combination of MON\_ inputs violates configurable combinations of undervoltage or overvoltage thresholds. Select the combination of MON\_ inputs using r3Ch[5:0] and r3Dh[5:0]. Note that MON\_ inputs configured as critical faults always cause RESET to assert regardless of these configuration bits.

RESET can be configured as push-pull or open drain using r3Bh[3], and active high or active low using r3Bh[2]. Select the reset timeout by loading a value from Table 15 into r3Bh[7:4].

To generate a one-shot pulse on RESET, write a '1' into r3Bh[0]. The pulse width is the configured reset timeout. Register bit r3Bh[0] clears automatically (see Table 15). The current state of RESET can be checked by reading r20h[0].

**Table 14. Autoretry Configuration**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                                                                                |
|------------------|---------------|-----------|----------------------------------------------------------------------------------------------------------------------------|
| 74h              | 274h          | [2:0]     | Retry Delay<br>000 = 20ms<br>001 = 40ms<br>010 = 80ms<br>011 = 150ms<br>100 = 280ms<br>101 = 540ms<br>110 = 1s<br>111 = 2s |
|                  |               | [4:3]     | Autoretry/Latch Mode<br>00 = Latch<br>01 = Retry 1 time<br>10 = Retry 3 times<br>11 = Always retry                         |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

Table 15. Reset Output Configuration

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                                                                                                                                                                                                                             |
|------------------|---------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3Bh              | 23Bh          | [0]       | RESET Soft Trigger<br>0 = Normal RESET behavior<br>1 = Force RESET to assert                                                                                                                                                                                            |
|                  |               | [1]       | Not used                                                                                                                                                                                                                                                                |
|                  |               | [2]       | 0 = Active low<br>1 = Active high                                                                                                                                                                                                                                       |
|                  |               | [3]       | 0 = Open drain<br>1 = Push-pull                                                                                                                                                                                                                                         |
|                  |               | [7:4]     | Reset Timeout Period<br>0000 = 25μs<br>0001 = 1.5ms<br>0010 = 2.5ms<br>0011 = 4ms<br>0100 = 6ms<br>0101 = 10ms<br>0110 = 15ms<br>0111 = 25ms<br>1000 = 40ms<br>1001 = 60ms<br>1010 = 100ms<br>1011 = 150ms<br>1100 = 250ms<br>1101 = 400ms<br>1110 = 600ms<br>1111 = 1s |
| 3Ch              | 23Ch          | [0]       | 1 = RESET depends on MON1 undervoltage                                                                                                                                                                                                                                  |
|                  |               | [1]       | 1 = RESET depends on MON2 undervoltage                                                                                                                                                                                                                                  |
|                  |               | [2]       | 1 = RESET depends on MON3 undervoltage                                                                                                                                                                                                                                  |
|                  |               | [3]       | 1 = RESET depends on MON4 undervoltage                                                                                                                                                                                                                                  |
|                  |               | [4]       | 1 = RESET depends on MON5 undervoltage                                                                                                                                                                                                                                  |
|                  |               | [5]       | 1 = RESET depends on MON6 undervoltage                                                                                                                                                                                                                                  |
|                  |               | [7:6]     | Not used                                                                                                                                                                                                                                                                |
| 3Dh              | 23Dh          | [0]       | 1 = RESET depends on MON1 overvoltage                                                                                                                                                                                                                                   |
|                  |               | [1]       | 1 = RESET depends on MON2 overvoltage                                                                                                                                                                                                                                   |
|                  |               | [2]       | 1 = RESET depends on MON3 overvoltage                                                                                                                                                                                                                                   |
|                  |               | [3]       | 1 = RESET depends on MON4 overvoltage                                                                                                                                                                                                                                   |
|                  |               | [4]       | 1 = RESET depends on MON5 overvoltage                                                                                                                                                                                                                                   |
|                  |               | [5]       | 1 = RESET depends on MON6 overvoltage                                                                                                                                                                                                                                   |
|                  |               | [7:6]     | Not used                                                                                                                                                                                                                                                                |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Watchdog Timer

The watchdog timer operates together with or independently of the MAX16068. When operating in dependent mode, the watchdog is not activated until RESET is deasserted. When operating in independent mode, the watchdog timer activates immediately after VCC exceeds the UVLO threshold and the boot phase is complete. Set r73h[4] to '0' to configure the watchdog in dependent mode. Set r73h[4] to '1' to configure the watchdog in independent mode. See Table 16 for more information on configuring the watchdog timer in dependent or independent mode. The watchdog timer can be reset by toggling the WDI inputs (GPIO4) or by writing a '1' to r75h[5].

### Dependent Watchdog Timer Operation

Use the watchdog timer to monitor  $\mu$ P activity in two modes. Flexible timeout architecture provides an adjustable watchdog startup delay of up to 300s, allowing complicated systems to complete lengthy boot-up routines. An adjustable watchdog timeout allows the supervisor to provide quick alerts when the processor activity fails. After each reset event (VCC drops below UVLO

then returns above UVLO, software reboot, manual reset (MR), EN input going low then high, or watchdog reset), the watchdog startup delay provides an extended time for the system to power up and fully initialize all  $\mu$ P and system components before assuming responsibility for routine watchdog updates. Set r76h[6:4] to a value other than '000' to enable the watchdog startup delay. Set r76h[6:4] to '000' to disable the watchdog startup delay.

The normal watchdog timeout period,  $t_{WDI}$ , begins after the first transition on WDI before the conclusion of the long startup watchdog period,  $t_{WDI\_STARTUP}$  (Figures 3 and 4). During the normal operating mode,  $\overline{WDO}$  asserts if the  $\mu$ P does not toggle WDI with a valid transition (high-to-low or low-to-high) within the standard timeout period,  $t_{WDI}$ .  $\overline{WDO}$  remains asserted until WDI is toggled or RESET is asserted (Figure 4).

While EN is low, the watchdog timer is in reset. The watchdog timer does not begin counting until the monitoring starts and RESET is deasserted. The watchdog timer is reset and  $\overline{WDO}$  deasserts any time RESET is asserted (Figure 5). The watchdog timer is held in reset while RESET is asserted.

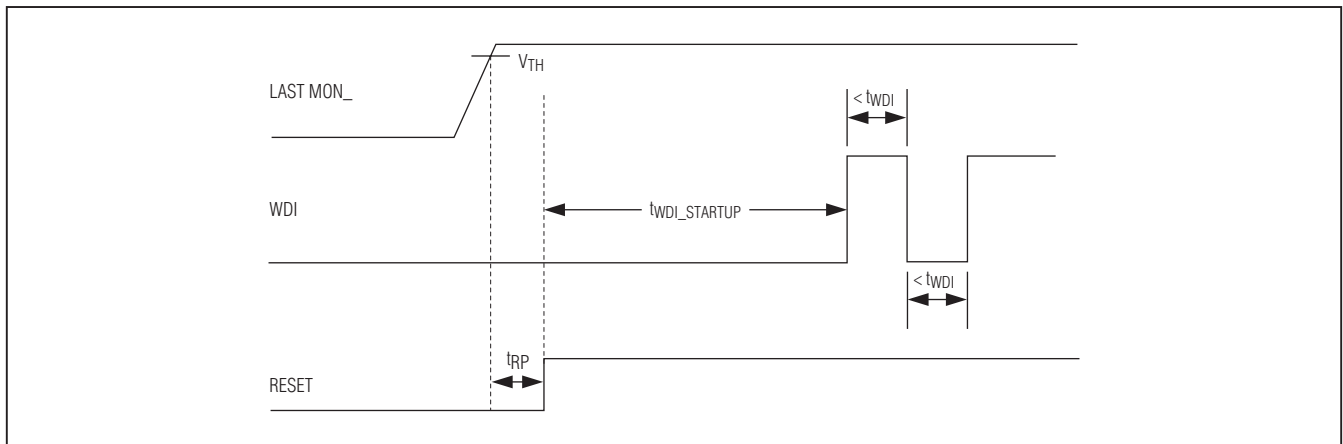


Figure 3. Normal Watchdog Startup Sequence

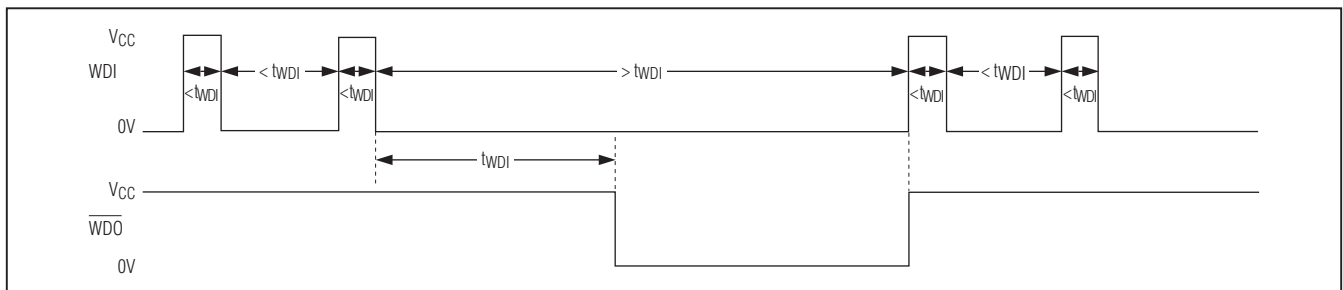


Figure 4. Watchdog Timer Operation

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

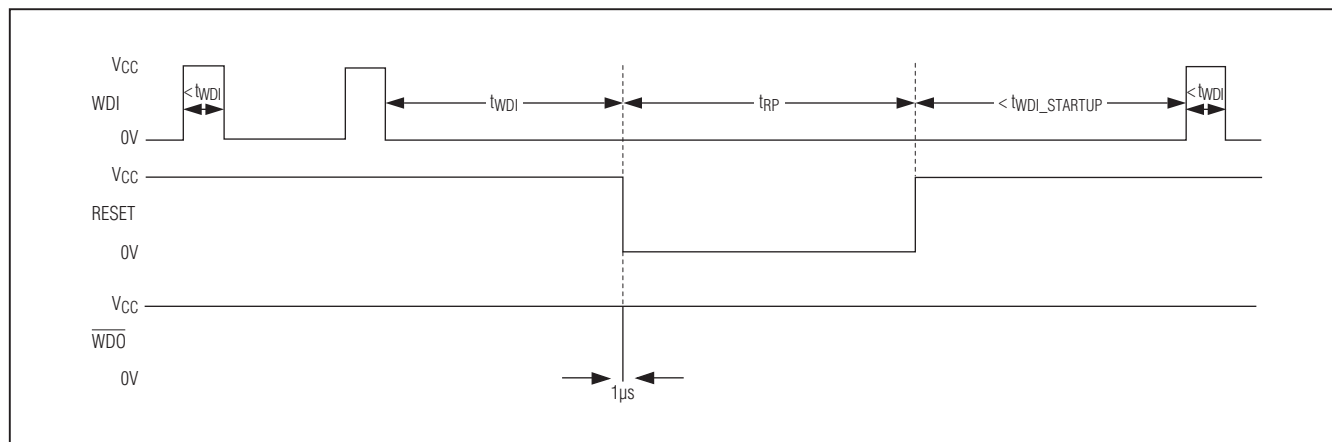


Figure 5. Watchdog Startup Sequence with Watchdog Reset Output Enable Bit Set to '1'

Table 16. Watchdog Configuration

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                                                                                                                                                                                                                                |
|------------------|---------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 73h              | 273h          | [4]       | 1 = Independent mode<br>0 = Dependent mode                                                                                                                                                                                                                                 |
| 76h              | 276h          | [7]       | 1 = Watchdog reset output enabled<br>0 = Watchdog reset output disabled                                                                                                                                                                                                    |
|                  |               | [6:4]     | Watchdog Startup Delay<br>000 = No initial timeout<br>001 = 30s<br>010 = 40s<br>011 = 80s<br>100 = 120s<br>101 = 160s<br>110 = 220s<br>111 = 300s                                                                                                                          |
|                  |               | [3:0]     | Watchdog Timeout<br>0000 = Watchdog disabled<br>0001 = 1ms<br>0010 = 2ms<br>0011 = 4ms<br>0100 = 8ms<br>0101 = 14ms<br>0110 = 27ms<br>0111 = 50ms<br>1000 = 100ms<br>1001 = 200ms<br>1010 = 400ms<br>1011 = 750ms<br>1100 = 1.4s<br>1101 = 2.7s<br>1110 = 5s<br>1111 = 10s |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

The watchdog can be configured to control the RESET output as well as the  $\overline{\text{WDO}}$  output. RESET asserts for the reset timeout,  $t_{RP}$ , when the watchdog timer expires and the Watchdog Reset Output Enable bit (r76h[7]) is set to '1'. When RESET is asserted, the watchdog timer is cleared and  $\overline{\text{WDO}}$  is deasserted, therefore,  $\overline{\text{WDO}}$  pulses low for a short time (approximately 1 $\mu$ s) when the watchdog timer expires. RESET is not affected by the watchdog timer when the Watchdog Reset Output Enable bit (r76h[7]) is set to '0'. If a RESET is asserted by the watchdog timeout, the WDRESET bit is set to '1'. A connected processor can check this bit to see the reset was due to a watchdog timeout.

See Table 16 for more information on configuring watchdog functionality.

### Independent Watchdog Timer Operation

When r73h[4] is '1,' the watchdog timer operates in the independent mode. In the independent mode, the watchdog timer operates as if it were a separate device. The watchdog timer is activated immediately upon VCC exceeding UVLO and once the boot-up sequence is finished. When RESET is asserted by EN being low, the watchdog timer and  $\overline{\text{WDO}}$  are not affected.

There is a startup delay if r76h[6:4] is set to a value different than '000'. If r76h[6:4] is set to '000', there is not a startup delay. See Table 16 for delay times.

In independent mode, if the Watchdog Reset Output Enable bit (r76h[7]) is set to '1,' when the watchdog timer expires,  $\overline{\text{WDO}}$  asserts then RESET asserts.  $\overline{\text{WDO}}$  then deasserts.  $\overline{\text{WDO}}$  is low for approximately 1 $\mu$ s. If the Watchdog Reset Output Enable bit (r76h[7]) is set to '0,' when the watchdog timer expires,  $\overline{\text{WDO}}$  asserts but RESET is not affected.

### User-Defined Register

Register r8Ah provides storage space for a user-defined configuration or firmware version number. Note that this register controls the contents of the JTAG USERCODE register bits 7-0. The user-defined register is stored at r28Ah in the flash memory.

### Memory Lock Bits

Register r8Ch contains the lock bits for the configuration registers, configuration flash, user flash, and fault register lock. See Table 17 for details.

### SMBus-Compatible Serial Interface

The MAX16068 features an SMBus-compatible, 2-wire serial interface consisting of a serial-data line (SDA) and a serial-clock line (SCL). SDA and SCL facilitate bidirectional communication between the MAX16068 and the master device at clock rates up to 400kHz. Figure 1 shows the 2-wire interface timing diagram. The MAX16068 is a transmit/receive, slave-only device, relying upon a master device to generate a clock signal. The master device (typically a microcontroller) initiates a data transfer on the bus and generates SCL to permit that transfer.

**Table 17. Memory Lock Bits**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                               |
|------------------|---------------|-----------|-----------------------------------------------------------|
| 8Ch              | 28Ch          | [0]       | Configuration Register Lock<br>1 = Locked<br>0 = Unlocked |
|                  |               | [1]       | Flash Fault Register Lock<br>1 = Locked<br>0 = Unlocked   |
|                  |               | [2]       | Flash Configuration Lock<br>1 = Locked<br>0 = Unlocked    |
|                  |               | [3]       | User Flash Lock<br>1 = Locked<br>0 = Unlocked             |
|                  |               | [7.4]     | Not used                                                  |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

A master device communicates to the MAX16068 by transmitting the proper address followed by command and/or data words. The slave address input, A0, is capable of detecting four different states, allowing multiple identical devices to share the same serial bus. The slave address is described further in the *Slave Address* section. Each transmit sequence is framed by a START (S) or REPEATED START (Sr) condition and a STOP (P) condition. Each word transmitted over the bus is 8 bits long and is always followed by an acknowledge pulse. SCL is a logic input, while SDA is an open-drain input/output. SCL and SDA both require external pullup resistors to generate the logic-high voltage. Use 4.7k $\Omega$  for most applications.

### Bit Transfer

Each clock pulse transfers one data bit. The data on SDA must remain stable while SCL is high (Figure 6); otherwise, the MAX16068 registers a START or STOP condition (Figure 7) from the master. SDA and SCL idle high when the bus is not busy.

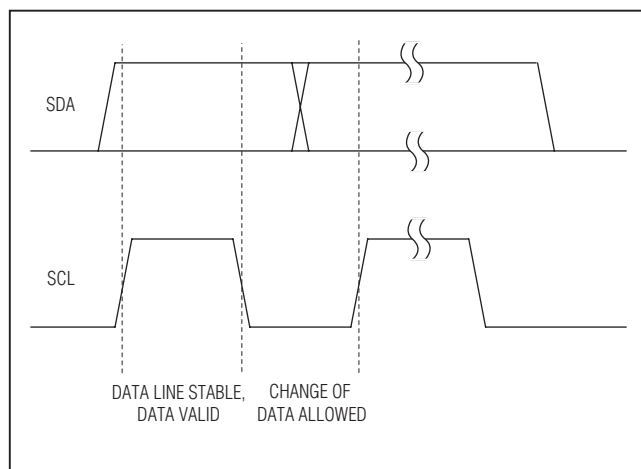


Figure 6. Bit Transfer

### START and STOP Conditions

A master device signals the beginning of a transmission with a START condition by transitioning SDA from high to low while SCL is high. The master device issues a STOP condition by transitioning SDA from low to high while SCL is high. A STOP condition frees the bus for another transmission. The bus remains active if a REPEATED START condition is generated, such as in the block read protocol (see Figure 1, SMBus Timing Diagram).

### Early STOP Conditions

The MAX16068 recognizes a STOP condition at any point during transmission except if a STOP condition occurs in the same high pulse as a START condition. This condition is not a legal SMBus format; at least one clock pulse must separate any START and STOP condition.

### REPEATED START Conditions

A REPEATED START can be sent instead of a STOP condition to maintain control of the bus during a read operation. The START and REPEATED START conditions are functionally identical.

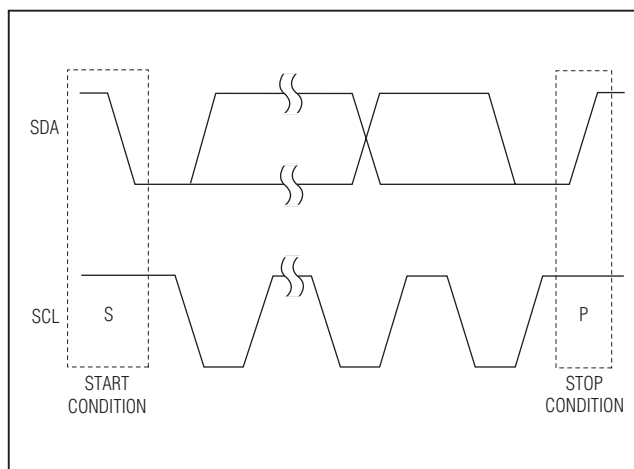


Figure 7. START and STOP Conditions



## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Acknowledge

The acknowledge bit (ACK) is the 9th bit attached to any 8-bit data word. The receiving device always generates an ACK. The MAX16068 generates an ACK when receiving an address or data by pulling SDA low during the 9th clock period (Figure 8). When transmitting data, such as when the master device reads data back from the MAX16068, the device waits for the master device to generate an ACK. Monitoring ACK allows for detection of unsuccessful data transfers. An unsuccessful data transfer occurs if the receiving device is busy or if a system fault has occurred. In the event of an unsuccessful data transfer, the bus master can reattempt communication at a later time. The MAX16068 generates a NACK after the command byte received during a software reboot, while writing to the flash, or when receiving an illegal memory address.

### Slave Address

Use the slave address input, A0, to allow multiple identical devices to share the same serial bus. Connect A0 to GND, DBP (or an external supply voltage greater than 2V), SCL, or SDA to set the device address on the bus. See Table 18 for a listing of all possible 7-bit addresses.

The slave address can also be set to a custom value by loading the address into register r8Bh[6:0]. See Table 19. If r8Bh[6:0] is loaded with 00h, the address is set by input A0. Do not set the address to 09h or 7Fh to avoid address conflicts. The slave address setting takes effect immediately after writing to the register.

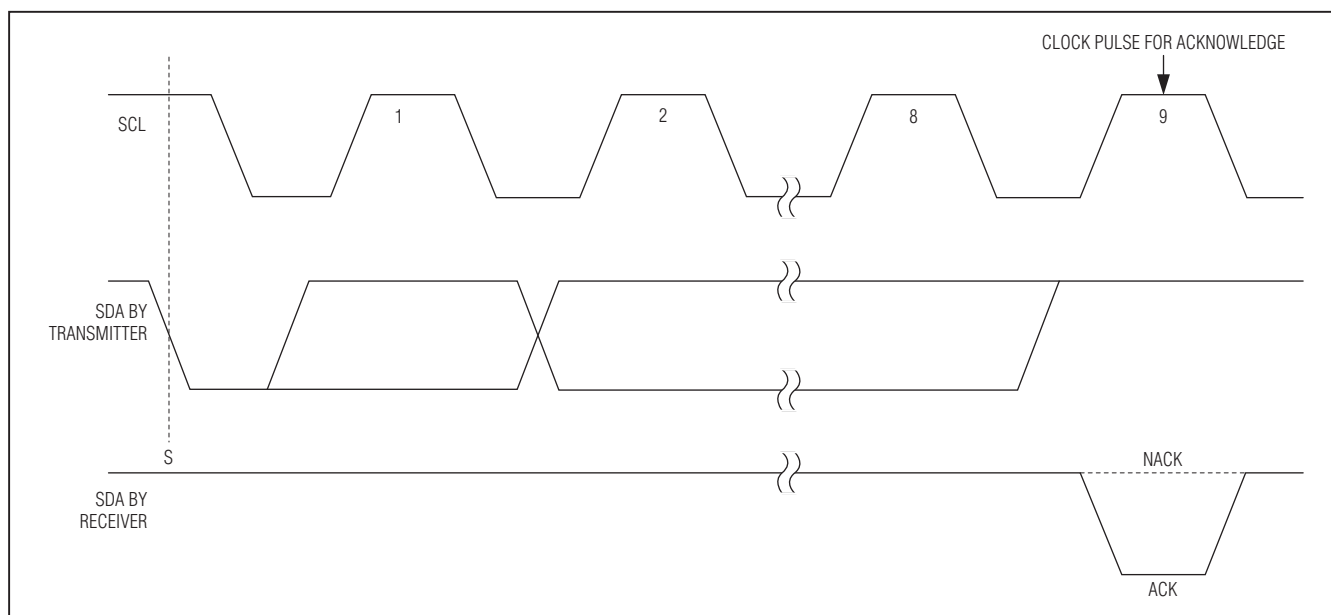


Figure 8. Acknowledge

Table 18. Setting the SMBus Slave Address

| SLAVE ADDRESSES |               |
|-----------------|---------------|
| A0              | SLAVE ADDRESS |
| 0               | 1010 100R     |
| 1               | 1010 101R     |
| SCL             | 1010 110R     |
| SDA             | 1010 111R     |

R = Read/write select bit.

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Packet Error Checking (PEC)

The MAX16068 features a packet-error checking (PEC) mode that is useful to improve the reliability of the communication bus by detecting bit errors. By enabling PEC, an extra CRC-8 error check byte is added in the data string during each read and/or write sequence. Enable PEC by writing a '1' to r8Bh[7].

The CRC-8 byte is calculated using the polynomial:

$$C = X^8 + X^2 + X + 1$$

The PEC calculation includes all bytes in the transmission, including address, command, and data. The PEC calculation does not include ACK, NACK, START, STOP, or REPEATED START.

### Command Codes

The MAX16068 uses eight command codes for block read, block write, and other commands. See Table 20 for a list of command codes.

To initiate a software reboot, send A7h using the send byte format. A software-initiated reboot is functionally the same as a hardware-initiated power-on reset. During boot-up, flash configuration data in the range of 230h–28Ch is copied to r30h–r8Ch registers in the default page.

Send command code A8h to trigger a fault store to flash. Configure the Critical Fault Log Control register (r6Dh) to store ADC conversion results and/or fault flags.

While in the flash page, send command code A9h to access the flash page (addresses from 230h–28Dh). Once command code A9h has been sent, all addresses are recognized as flash addresses only. Send command code AAh to return to the default page (addresses from 000h–08Dh). Send command code ABh to access the user flash-page (addresses from 300h–3FFh), and send command code ACh to return to the flash page.

### Restrictions When Writing to Flash

Flash must be written to 8 bytes at a time. The initial address must be aligned to 8-byte boundaries—the 3 LSBs of the initial address must be '000'. Write the 8 bytes using a single block write command or using eight successive Write Byte commands. A write operation requires 122ms for each 8-byte block. After programming a block, check r20h[1] (see Table 25) to make sure the write operation is complete before attempting to write the next block.

**Table 19. SMBus Settings Register**

| REGISTER ADDRESS | FLASH ADDRESS | BIT RANGE | DESCRIPTION                                                             |
|------------------|---------------|-----------|-------------------------------------------------------------------------|
| 8Bh              | 28Bh          | [6:0]     | SMBus Slave Address Register. Set to 00h to use A0 pin address setting. |
|                  |               | [7]       | 1 = Enable PEC (Packet Error Check).                                    |

**Table 20. Command Codes**

| COMMAND CODE | ACTION                                               |
|--------------|------------------------------------------------------|
| A5h          | Block write                                          |
| A6h          | Block read                                           |
| A7h          | Reboot flash in register file                        |
| A8h          | Trigger emergency save to flash                      |
| A9h          | Flash page access ON                                 |
| AAh          | Flash page access OFF                                |
| ABh          | User flash access ON (must be in flash page already) |
| ACh          | User flash access OFF (return to flash page)         |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Send Byte

The send byte protocol allows the master device to send one byte of data to the slave device (see Figure 9). The send byte presets a register pointer address for a subsequent read or write. The slave sends a NACK instead of an ACK if the master tries to send a memory address or command code that is not allowed. If the master sends A5h or A6h, the data is ACK, because this could be the start of the write block or read block. If the master sends a STOP condition before the slave asserts an ACK, the internal address pointer does not change. If the master sends A7h, this signifies a software reboot. The send byte procedure is as follows:

- 1) The master sends a START condition.
- 2) The master sends the 7-bit slave address and a write bit (low).
- 3) The addressed slave asserts an ACK on SDA.
- 4) The master sends an 8-bit memory address or command code.
- 5) The addressed slave asserts an ACK (or NACK) on SDA.
- 6) The master sends a STOP condition.

### Receive Byte

The receive byte protocol allows the master device to read the register content of the MAX16068 (see Figure 9). The flash or register address must be preset with a send byte or write word protocol first. Once the read is complete, the internal pointer increases by one. Repeating the receive byte protocol reads the contents of the next address. The receive byte procedure follows:

- 1) The master sends a START condition.
- 2) The master sends the 7-bit slave address and a read bit (high).
- 3) The addressed slave asserts an ACK on SDA.
- 4) The slave sends 8 data bits.
- 5) The master asserts a NACK on SDA.
- 6) The master generates a STOP condition.

### Write Byte

The write byte protocol (see Figure 9) allows the master device to write a single byte in the default page, extended page, or flash page, depending on which page is currently selected. The write byte procedure is as follows:

- 1) The master sends a START condition.

- 2) The master sends the 7-bit slave address and a write bit (low).
- 3) The addressed slave asserts an ACK on SDA.
- 4) The master sends an 8-bit memory address.
- 5) The addressed slave asserts an ACK on SDA.
- 6) The master sends an 8-bit data byte.
- 7) The addressed slave asserts an ACK on SDA.
- 8) The master sends a STOP condition.

To write a single byte, only the 8-bit memory address and a single 8-bit data byte are sent. The data byte is written to the addressed location if the memory address is valid. The slave asserts a NACK at step 5 if the memory address is not valid.

When PEC is enabled, the Write Byte protocol becomes:

- 1) The master sends a START condition.
- 2) The master sends the 7-bit slave ID plus a write bit (low).
- 3) The addressed slave asserts an ACK on the data line.
- 4) The master sends an 8-bit memory address.
- 5) The active slave asserts an ACK on the data line.
- 6) The master sends an 8-bit data byte.
- 7) The slave asserts an ACK on the data line.
- 8) The master sends an 8-bit PEC byte.
- 9) The slave asserts an ACK on the data line (if PEC is good, otherwise NACK).
- 10) The master generates a STOP condition.

### Read Byte

The read byte protocol (see Figure 9) allows the master device to read a single byte located in the default page, extended page, or flash page depending on which page is currently selected. The read byte procedure is as follows:

- 1) The master sends a START condition.
- 2) The master sends the 7-bit slave address and a write bit (low).
- 3) The addressed slave asserts an ACK on SDA.
- 4) The master sends an 8-bit memory address.
- 5) The addressed slave asserts an ACK on SDA.
- 6) The master sends a REPEATED START condition.
- 7) The master sends the 7-bit slave address and a read bit (high).
- 8) The addressed slave asserts an ACK on SDA.

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

- 9) The slave sends an 8-bit data byte.
- 10) The master asserts a NACK on SDA.
- 11) The master sends a STOP condition.

If the memory address is not valid, it is NACKed by the slave at step 5 and the address pointer is not modified.

When PEC is enabled, the Read Byte protocol becomes:

- 1) The master sends a START condition.
- 2) The master sends the 7-bit slave ID plus a write bit (low).
- 3) The addressed slave asserts an ACK on the data line.
- 4) The master sends 8-bit memory address.
- 5) The active slave asserts an ACK on the data line.
- 6) The master sends a REPEATED START condition.
- 7) The master sends the 7-bit slave ID plus a read bit (high).
- 8) The addressed slave asserts an ACK on the data line.
- 9) The slave sends 8 data bits.
- 10) The master asserts an ACK on the data line.
- 11) The slave sends an 8-bit PEC byte.
- 12) The master asserts a NACK on the data line.
- 13) The master generates a STOP condition.

### Block Write

The block write protocol (see Figure 9) allows the master device to write a block of data (1–16 bytes) to memory. Preload the destination address by a previous send byte command; otherwise the block write command begins to write at the current address pointer. After the last byte is written, the address pointer remains preset to the next valid address. If the number of bytes to be written causes the address pointer to exceed 8Fh for configuration registers or configuration flash or FFh for user flash, the address pointer stays at 8Fh or FFh, respectively, overwriting this memory address with the remaining bytes of data. The slave generates a NACK at step 5 if the command code is invalid or if the device is busy, and the address pointer is not altered.

The block write procedure is as follows:

- 1) The master sends a START condition.
- 2) The master sends the 7-bit slave address and a write bit (low).

- 3) The addressed slave asserts an ACK on SDA.
- 4) The master sends the 8-bit command code for block write (A5h).
- 5) The addressed slave asserts an ACK on SDA.
- 6) The master sends the 8-bit byte count (1 byte to 16 bytes), n.
- 7) The addressed slave asserts an ACK on SDA.
- 8) The master sends 8 bits of data.
- 9) The addressed slave asserts an ACK on SDA.
- 10) Repeat steps 8 and 9 n - 1 times.
- 11) The master sends a STOP condition.

When PEC is enabled, the Block Write protocol becomes:

- 1) The master sends a START condition.
- 2) The master sends the 7-bit slave ID plus a write bit (low).
- 3) The addressed slave asserts an ACK on the data line.
- 4) The master sends 8 bits of the block write command code.
- 5) The slave asserts an ACK on the data line.
- 6) The master sends 8 bits byte count (min 1, max 16) n.
- 7) The slave asserts an ACK on the data line.
- 8) The master sends 8 bits of data.
- 9) The slave asserts an ACK on the data line.
- 10) Repeat 8 and 9 n - 1 times.
- 11) The master sends an 8-bit PEC byte.
- 12) The slave asserts an ACK on the data line (if PEC is good, otherwise NACK).
- 13) The master generates a STOP condition.

**Block Read** The block read protocol (see Figure 9) allows the master device to read a block of up to 16 bytes from memory. Read fewer than 16 bytes of data by issuing an early STOP condition from the master, or by generating a NACK with the master. The destination address should be preloaded by a previous send byte command; otherwise, the block read command begins to read at the current address pointer. If the number of bytes to be read causes the address pointer to exceed 8Fh for the configuration register or configuration flash or FFh in user flash, the address pointer stays at 8Fh or FFh, respectively.

The block read procedure is the following:

# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

## SEND BYTE FORMAT

| S | ADDRESS | R/W | ACK | COMMAND | ACK | P |
|---|---------|-----|-----|---------|-----|---|
| ↓ | 7 BITS  | 0   | 0   | 8 BITS  | 0   | ↑ |

SLAVE ADDRESS: Address of the slave on the serial interface bus.

DATA BYTE: Presets the internal address pointer or represents a command.

## RECEIVE BYTE FORMAT

| S | ADDRESS | R/W | ACK | DATA   | NACK | P |
|---|---------|-----|-----|--------|------|---|
| ↓ | 7 BITS  | 1   | 0   | 8 BITS | 1    | ↑ |

SLAVE ADDRESS: Address of the slave on the serial interface bus.

DATA BYTE: Data is read from the location pointed to by the internal address pointer.

## WRITE BYTE FORMAT

| S | ADDRESS | R/W | ACK | COMMAND | ACK | DATA   | ACK | P |
|---|---------|-----|-----|---------|-----|--------|-----|---|
| ↓ | 7 BITS  | 0   | 0   | 8 BITS  | 0   | 8 BITS | 0   | ↑ |

SLAVE ADDRESS: Address of the slave on the serial interface bus.

COMMAND BYTE: Sets the internal address pointer.

DATA BYTE: Data is written to the locations set by the internal address pointer.

## SMBALERT#

| S | ADDRESS | R/W  | ACK | DATA   | NACK | P |
|---|---------|------|-----|--------|------|---|
| ↓ | 0001100 | D.C. | 0   | 8 BITS | 1    | ↑ |

ALERT RESPONSE ADDRESS: Only the device that interrupted the master responds to this address.

SLAVE ADDRESS: Slave places its own address on the serial bus.

## READ BYTE FORMAT

| S | SLAVE ADDRESS | R/W | ACK | COMMAND | ACK | SR | SLAVE ADDRESS | R/W | ACK | DATA BYTE | NACK | P |
|---|---------------|-----|-----|---------|-----|----|---------------|-----|-----|-----------|------|---|
| ↓ | 7 BITS        | 0   | 0   | 8 BITS  | 0   | ↓  | 7 BITS        | 1   | 0   | 8 BITS    | 1    | ↑ |

SLAVE ADDRESS: Address of the slave on the serial interface bus.

COMMAND BYTE: Sets the internal address pointer.

DATA BYTE: Data is read from the locations set by the internal address pointer.

## BLOCK WRITE FORMAT

| S | ADDRESS | R/W | ACK | COMMAND | ACK | BYTE COUNT = N | ACK | DATA BYTE 1 | ACK | DATA BYTE ... | ACK | DATA BYTE N | ACK | P |
|---|---------|-----|-----|---------|-----|----------------|-----|-------------|-----|---------------|-----|-------------|-----|---|
| ↓ | 7 BITS  | 0   | 0   | 8 BITS  | 0   | 8 BITS         | 0   | 8 BITS      | 0   | 8 BITS        | 0   | 8 BITS      | 0   | ↑ |

SLAVE ADDRESS: Address of the slave on the serial interface bus.

COMMAND BYTE: A5h

DATA BYTE: Data is written to the locations set by the internal address pointer.

SLAVE TO MASTER

MASTER TO SLAVE

## BLOCK READ FORMAT

| S | ADDRESS | R/W | ACK | COMMAND | ACK | SR | ADDRESS | R/W | ACK | BYTE COUNT = N | ACK | DATA BYTE 1 | ACK | DATA BYTE ... | ACK | DATA BYTE N | NACK | P |
|---|---------|-----|-----|---------|-----|----|---------|-----|-----|----------------|-----|-------------|-----|---------------|-----|-------------|------|---|
| ↓ | 7 BITS  | 0   | 0   | 8 BITS  | 0   | ↓  | 7 BITS  | 1   | 0   | 8 BITS         | 0   | 8 BITS      | 0   | 8 BITS        | 0   | 8 BITS      | 1    | ↑ |

SLAVE ADDRESS: Address of the slave on the serial interface bus.

COMMAND BYTE: A6h

SLAVE ADDRESS: Address of the slave on the serial interface bus.

DATA BYTE: Data is read from the locations set by the internal address pointer.

## WRITE BYTE FORMAT WITH PEC

| S | ADDRESS | R/W | ACK | COMMAND | ACK | DATA   | ACK | PEC    | ACK | P |
|---|---------|-----|-----|---------|-----|--------|-----|--------|-----|---|
| ↓ | 7 BITS  | 0   | 0   | 8 BITS  | 0   | 8 BITS | 0   | 8 BITS | 0   | ↑ |

## READ BYTE FORMAT WITH PEC

| S | ADDRESS | R/W | ACK | COMMAND | ACK | SR | ADDRESS | R/W | ACK | DATA   | ACK | PEC    | NACK | P |
|---|---------|-----|-----|---------|-----|----|---------|-----|-----|--------|-----|--------|------|---|
| ↓ | 7 BITS  | 0   | 0   | 8 BITS  | 0   | ↓  | 7 BITS  | 1   | 0   | 8 BITS | 0   | 8 BITS | 1    | ↑ |

## BLOCK WRITE WITH PEC

| S | ADDRESS | R/W | ACK | COMMAND | ACK | BYTE COUNT = N | ACK | DATA BYTE 1 | ACK | DATA BYTE ... | ACK | DATA BYTE N | ACK | PEC    | ACK | P |
|---|---------|-----|-----|---------|-----|----------------|-----|-------------|-----|---------------|-----|-------------|-----|--------|-----|---|
| ↓ | 7 BITS  | 0   | 0   | 8 BITS  | 0   | 8 BITS         | 0   | 8 BITS      | 0   | 8 BITS        | 0   | 8 BITS      | 0   | 8 BITS | 0   | ↑ |

## BLOCK READ WITH PEC

| S | ADDRESS | R/W | ACK | COMMAND | ACK | SR | ADDRESS | R/W | ACK | BYTE COUNT = N | ACK | DATA BYTE 1 | ACK | DATA BYTE ... | ACK | DATA BYTE N | ACK | PEC    | NACK | P |
|---|---------|-----|-----|---------|-----|----|---------|-----|-----|----------------|-----|-------------|-----|---------------|-----|-------------|-----|--------|------|---|
| ↓ | 7 BITS  | 0   | 0   | 8 BITS  | 0   | ↓  | 7 BITS  | 1   | 0   | 8 BITS         | 0   | 8 BITS      | 0   | 8 BITS        | 0   | 8 BITS      | 0   | 8 BITS | 1    | ↑ |

S = START CONDITION

P = STOP CONDITION

Sr = REPEATED START CONDITION

D.C. = DON'T CARE

ACK = ACKNOWLEDGE, SDA PULLED LOW DURING RISING EDGE OF SCL.

NACK = NOT ACKNOWLEDGE, SDA LEFT HIGH DURING RISING EDGE OF SCL.

ALL DATA IS CLOCKED IN/OUT OF THE DEVICE ON RISING EDGES OF SCL.

↓ = SDA TRANSITIONS FROM HIGH TO LOW DURING PERIOD OF SCL.

↑ = SDA TRANSITIONS FROM LOW TO HIGH DURING PERIOD OF SCL.

Figure 9. SMBus Protocols

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

- 1) The master sends a START condition.
- 2) The master sends the 7-bit slave address and a write bit (low).
- 3) The addressed slave asserts an ACK on SDA.
- 4) The master sends 8 bits of the block read command (A6h).
- 5) The slave asserts an ACK on SDA, unless busy.
- 6) The master generates a REPEATED START condition.
- 7) The master sends the 7-bit slave address and a read bit (high).
- 8) The slave asserts an ACK on SDA.
- 9) The slave sends the 8-bit byte count (16).
- 10) The master asserts an ACK on SDA.
- 11) The slave sends 8 bits of data.
- 12) The master asserts an ACK on SDA.
- 13) Repeat steps 11 and 12 up to fifteen times.
- 14) The master asserts a NACK on SDA.
- 15) The master sends a STOP condition.

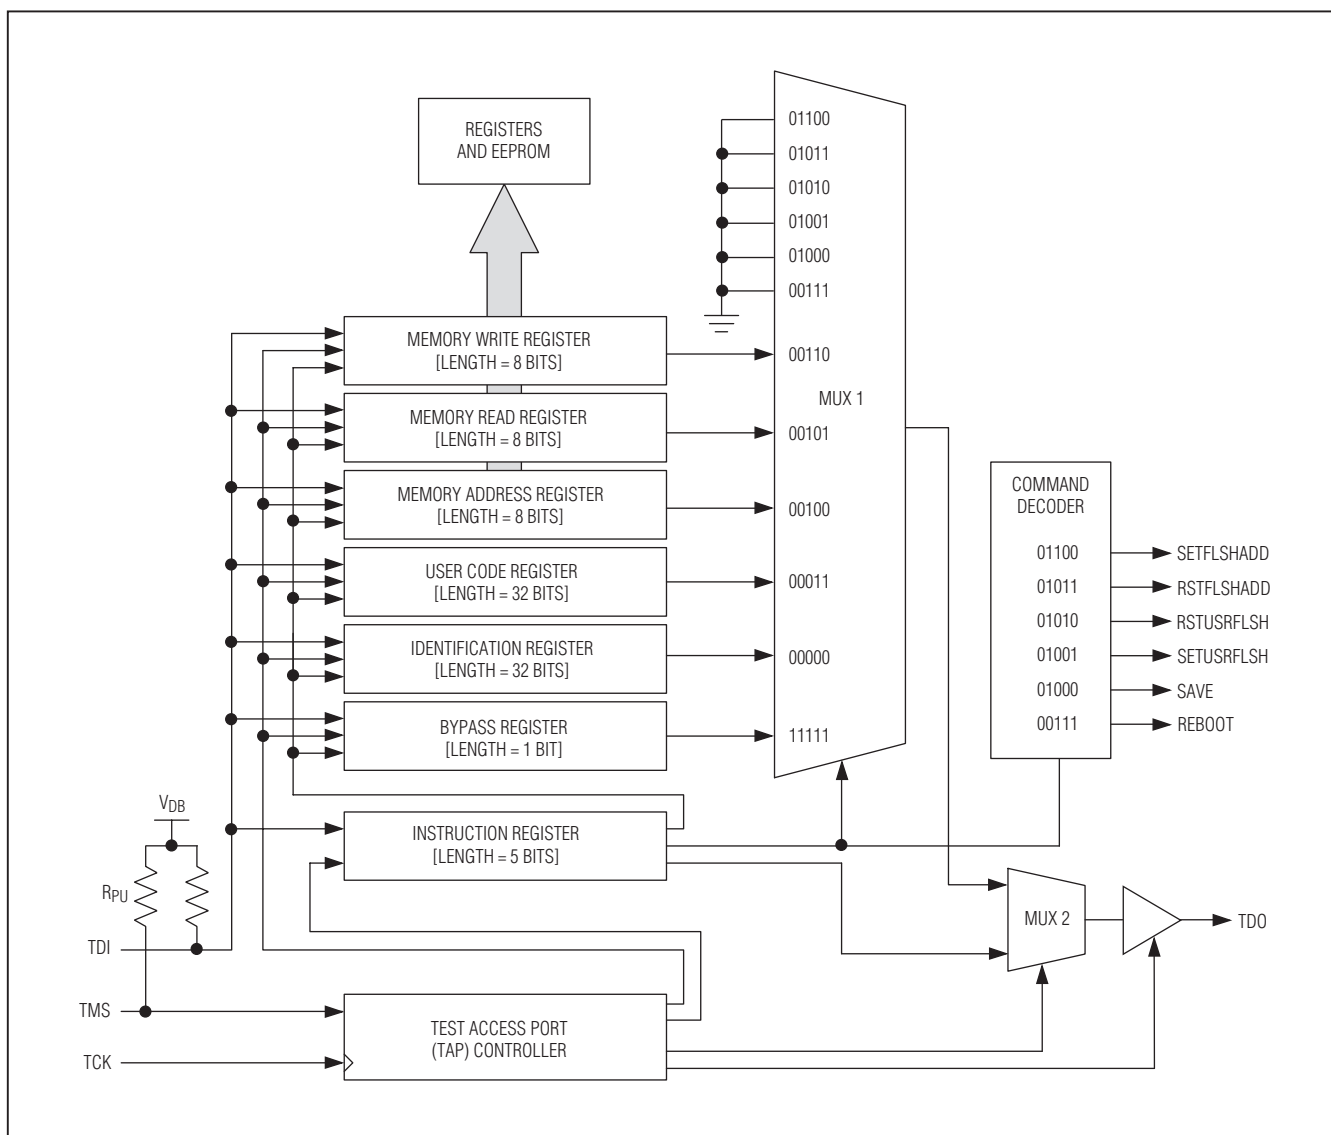


Figure 10. JTAG Block Diagram



## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

When PEC is enabled, the Block Read protocol becomes:

- 1) The master sends a START condition.
- 2) The master sends the 7-bit slave ID plus a write bit (low).
- 3) The addressed slave asserts an ACK on the data line.
- 4) The master sends 8 bits of the block read command code.
- 5) The slave asserts an ACK on the data line unless busy.
- 6) The master sends a REPEATED START condition.
- 7) The master sends the 7-bit slave ID plus a read bit (high).
- 8) The slave asserts an ACK on the data line.
- 9) The slave sends 8-bit byte count (16).
- 10) The master asserts an ACK on the data line.
- 11) The slave sends 8 bits of data.
- 12) The master asserts an ACK on the data line.
- 13) Repeat 11 and 12 up to 15 times.
- 14) The slave sends an 8-bit PEC byte.
- 15) The master asserts a NACK on the data line.
- 16) The master generates a STOP condition.

### **SMBALERT ( $\overline{\text{ALERT}}$ )**

The MAX16068 supports the SMBus alert protocol. To enable the SMBus alert output, set r40h[4] to '1', then configure GPIO1 to act as the SMBus alert ( $\overline{\text{ALERT}}$ ) according to Table 12. This output is open drain and uses the wired-OR configuration with other devices on the SMBus. During a fault, the MAX16068 asserts  $\overline{\text{ALERT}}$  low, signaling the master that an interrupt has occurred. The master responds by sending the ARA (Alert Response Address) protocol on the SMBus. This protocol is a read byte with 09h as the slave address. The slave acknowledges the ARA (09h) address and sends its own SMBus address to the master. The slave then deasserts  $\overline{\text{ALERT}}$ . The master can then query the slave and determine the cause of the fault. By checking r1C[7], the master can confirm that the MAX16068 triggered the SMBus alert. The master must send the ARA before clearing r1Ch[7]. Clear r1Ch[7] by writing a '1'. If GPIO1 is configured as the SMBus alert output but the SMBus alert feature is disabled (r40h[4] is set to '0'), GPIO1 acts as an additional fault output.

### **JTAG Serial Interface**

The MAX16068 features a JTAG port that complies with a subset of the IEEE® 1149.1 specification. Either the SMBus or the JTAG interface can be used to access internal memory; however, only one interface is allowed to run at a time. The MAX16068 contains extra JTAG instructions and registers not included in the JTAG specification that provide access to internal memory. The extra instructions include LOAD ADDRESS, WRITE DATA, READ DATA, REBOOT, and SAVE.

### **Test Access Port (TAP)**

#### **Controller State Machine**

The TAP controller is a finite state machine that responds to the logic level at TMS on the rising edge of TCK. See Figure 11 for a diagram of the finite state machine. The possible states are described as follows:

**Test-Logic-Reset:** At power-up, the TAP controller is in the test-logic-reset state. The instruction register contains the IDCODE instruction. All system logic of the device operates normally. This state can be reached from any state by driving TMS high for five clock cycles.

**Run-Test/Idle:** The run-test/idle state is used between scan operations or during specific tests. The instruction register and test data registers remain idle.

**Select-DR-Scan:** All test data registers retain their previous state. With TMS low, a rising edge of TCK moves the controller into the capture-DR state and initiates a scan sequence. TMS high during a rising edge on TCK moves the controller to the select-IR-scan state.

**Capture-DR:** Data can be parallel-loaded into the test data registers selected by the current instruction. If the instruction does not call for a parallel load or the selected test data register does not allow parallel loads, the test data register remains at its current value. On the rising edge of TCK, the controller goes to the shift-DR state if TMS is low or it goes to the exit1-DR state if TMS is high.

**Shift-DR:** The test data register selected by the current instruction connects between TDI and TDO and shifts data one stage toward its serial output on each rising edge of TCK while TMS is low. On the rising edge of TCK, the controller goes to the exit1-DR state if TMS is high.

**Exit1-DR:** While in this state, a rising edge on TCK puts the controller in the update-DR state. A rising edge on TCK with TMS low puts the controller in the pause-DR state.

IEEE is a registered service mark of the Institute of Electrical and Electronics Engineers, Inc.

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

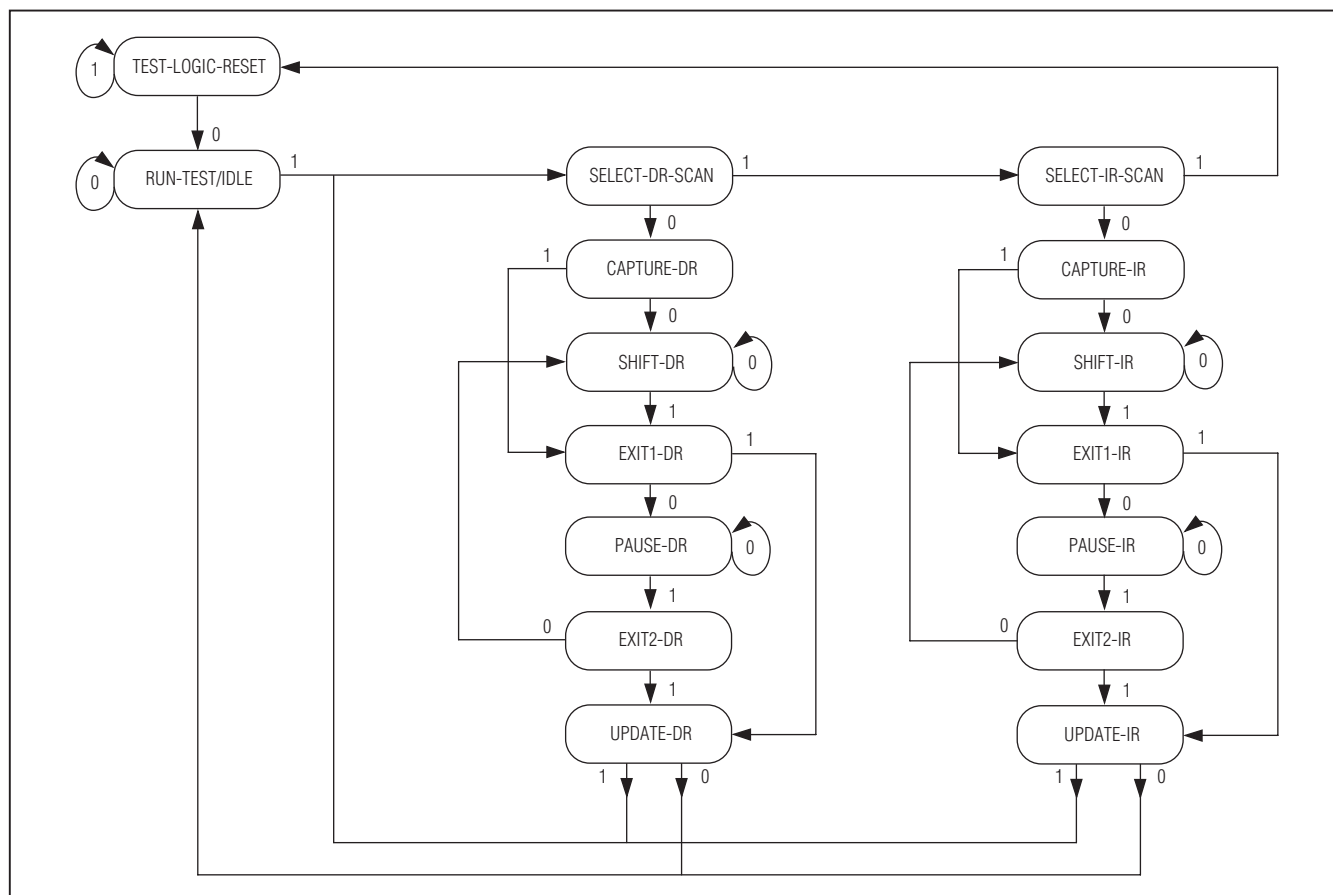


Figure 11. Tap Controller State Diagram

**Pause-DR:** Shifting of the test data registers halts while in this state. All test data registers retain their previous state. The controller remains in this state while TMS is low. A rising edge on TCK with TMS high puts the controller in the exit2-DR state.

**Exit2-DR:** A rising edge on TCK with TMS high while in this state puts the controller in the update-DR state. A rising edge on TCK with TMS low enters the shift-DR state.

**Update-DR:** A falling edge on TCK while in the update-DR state latches the data from the shift register path of the test data registers into a set of output latches. This prevents changes at the parallel output because of changes in the shift register. On the rising edge of TCK, the controller goes to the run-test/idle state if TMS is low or goes to the select-DR-scan state if TMS is high.

**Select-IR-Scan:** All test data registers retain the previous states. The instruction register remains unchanged during this state. With TMS low, a rising edge on TCK

moves the controller into the capture-IR state. TMS high during a rising edge on TCK puts the controller back into the test-logic-reset state.

**Capture-IR:** Use the capture-IR state to load the shift register in the instruction register with a fixed value. This value is loaded on the rising edge of TCK. If TMS is high on the rising edge of TCK, the controller enters the exit1-IR state. If TMS is low on the rising edge of TCK, the controller enters the shift-IR state.

**Shift-IR:** In this state, the shift register in the instruction register connects between TDI and TDO and shifts data one stage for every rising edge of TCK toward the TDO serial output while TMS is low. The parallel outputs of the instruction register as well as all test data registers remain at the previous states. A rising edge on TCK with TMS high moves the controller to the exit1-IR state. A rising edge on TCK with TMS low keeps the controller in the shift-IR state while moving data one stage through the instruction shift register.



## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

**Exit1-IR:** A rising edge on TCK with TMS low puts the controller in the pause-IR state. If TMS is high on the rising edge of TCK, the controller enters the update-IR state.

**Pause-IR:** Shifting of the instruction shift register halts temporarily. With TMS high, a rising edge on TCK puts the controller in the exit2-IR state. The controller remains in the pause-IR state if TMS is low during a rising edge on TCK.

**Exit2-IR:** A rising edge on TCK with TMS high puts the controller in the update-IR state. The controller loops back to shift-IR if TMS is low during a rising edge of TCK in this state.

**Update-IR:** The instruction code that has been shifted into the instruction shift register latches to the parallel outputs of the instruction register on the falling edge of TCK as the controller enters this state. Once latched, this instruction becomes the current instruction. A rising edge on TCK with TMS low puts the controller in the run-test/idle state. With TMS high, the controller enters the select-DR-scan state.

### Instruction Register

The instruction register contains a shift register as well as a latched 5-bit wide parallel output. When the TAP controller enters the shift-IR state, the instruction shift register connects between TDI and TDO. While in the

shift-IR state, a rising edge on TCK with TMS low shifts the data one stage toward the serial output at TDO. A rising edge on TCK in the exit1-IR state or the exit2-IR state with TMS high moves the controller to the update-IR state. The falling edge of that same TCK latches the data in the instruction shift register to the instruction register parallel output. Table 21 shows the instructions supported by the MAX16068 and the respective operational binary codes.

**BYPASS:** When the BYPASS instruction is latched into the instruction register, TDI connects to TDO through the 1-bit bypass test data register. This allows data to pass from TDI to TDO without affecting the device's operation.

**IDCODE:** When the IDCODE instruction is latched into the parallel instruction register, the identification data register is selected. The device identification code is loaded into the identification data register on the rising edge of TCK following entry into the capture-DR state. Shift-DR can be used to shift the identification code out serially through TDO. During test-logic-reset, the IDCODE instruction is forced into the instruction register. The identification code always has a '1' in the LSB position. The next 11 bits identify the manufacturer's JEDEC number and number of continuation bytes followed by 16 bits for the device and 4 bits for the version. See Table 22.

**Table 21. JTAG Instruction Set**

| INSTRUCTION  | CODE | NOTES                                                |
|--------------|------|------------------------------------------------------|
| BYPASS       | 0x1F | Mandatory instruction code                           |
| IDCODE       | 0x00 | Load manufacturer ID code/part number                |
| USERCODE     | 0x03 | Load user code                                       |
| LOAD ADDRESS | 0x04 | Load address register content                        |
| READ DATA    | 0x05 | Read data pointed by current address                 |
| WRITE DATA   | 0x06 | Write data pointed by current address                |
| REBOOT       | 0x07 | Reboot FLASH data content into register file         |
| SAVE         | 0x08 | Trigger emergency save to flash                      |
| SETFLSHADD   | 0x09 | Flash page access ON                                 |
| RSTFLSHADD   | 0x0A | Flash page access OFF                                |
| SETUSRFLSH   | 0x0B | User flash access ON (must be in flash page already) |
| RSTUSRFLSH   | 0x0C | User flash access OFF (return to flash page)         |

**Table 22. 32-Bit Identification Code**

| MSB              |                       | LSB                    |                     |
|------------------|-----------------------|------------------------|---------------------|
| VERSION (4 BITS) | PART NUMBER (16 BITS) | MANUFACTURER (11 BITS) | FIXED VALUE (1 BIT) |
| 0001             | 1000000000000010      | 00011001011            | 1                   |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

**USERCODE:** When the USERCODE instruction latches into the parallel instruction register, the user-code data register is selected. The device user-code loads into the user-code data register on the rising edge of TCK following entry into the capture-DR state. Shift-DR can be used to shift the user-code out serially through TDO. See Table 24. This instruction can be used to help identify multiple MAX16068 devices connected in a JTAG chain.

**LOAD ADDRESS:** This is an extension to the standard IEEE 1149.1 instruction set to support access to the memory in the MAX16068. When the LOAD ADDRESS instruction latches into the instruction register, TDI connects to TDO through the 8-bit memory address test data register during the shift-DR state.

**READ DATA:** This is an extension to the standard IEEE 1149.1 instruction set to support access to the memory in the MAX16068. When the READ DATA instruction latches into the instruction register, TDI connects to TDO through the 8-bit memory read test data register during the shift-DR state.

**WRITE DATA:** This is an extension to the standard IEEE 1149.1 instruction set to support access to the memory in the MAX16068. When the WRITE DATA instruction latches into the instruction register, TDI connects to TDO through the 8-bit memory write test data register during the shift-DR state.

**REBOOT:** This is an extension to the standard IEEE 1149.1 instruction set to initiate a software-controlled reset to the MAX16068. When the REBOOT instruction latches into the instruction register, the MAX16068 resets and immediately begins the boot-up sequence.

**SAVE:** This is an extension to the standard IEEE 1149.1 instruction set that triggers a fault log. The current ADC conversion results along with fault information are saved to flash depending on the configuration of the Critical Fault Log Control register (r6Dh).

**SETFLSHADD:** This is an extension to the standard IEEE 1149.1 instruction set that allows access to the flash page. Flash registers include ADC conversion results and GPIO\_ input/output data. Use this page to access registers 200h–2FFh.

**RSTFLSHADD:** This is an extension to the standard IEEE 1149.1 instruction set. Use RSTFLSHADD to return to the default page and disable access to the flash page.

**SETUSRFLSH:** This is an extension to the standard IEEE 1149.1 instruction set that allows access to the user flash page. When on the configuration flash page, send the SETUSRFLSH command, all addresses are recognized as flash addresses only. Use this page to access registers 300h–3FFh.

**RSTUSRFLSH:** This is an extension to the standard IEEE 1149.1 instruction set. Use RSTUSRFLSH to return to the configuration flash page and disable access to the user flash.

### Restrictions When Writing to Flash

Flash must be written to 8 bytes at a time. The initial address must be aligned to 8-byte boundaries—the 3 LSBs of the initial address must be '000'. Write the 8 bytes using eight successive WRITE DATA commands. A write operation requires 122ms for each 8-byte block. After programming a block, check r20h[1] (see Table 25) to make sure the write operation is complete before attempting to write the next block.

**Table 23. 32-Bit User-Code Data**

| MSB                  |  |  |  | LSB                 |  |  |  |
|----------------------|--|--|--|---------------------|--|--|--|
| DON'T CARE           |  |  |  | SMBUS SLAVE ID      |  |  |  |
| 00000000000000000000 |  |  |  | See Table 18        |  |  |  |
|                      |  |  |  | USER ID (r8Ah[7:0]) |  |  |  |
|                      |  |  |  |                     |  |  |  |

**Table 24. Maximum Write Time**

| r6Dh[1:0] VALUE | DESCRIPTION                 | MAXIMUM WRITE TIME (ms) |
|-----------------|-----------------------------|-------------------------|
| 00              | Save flags and ADC readings | 153                     |
| 01              | Save flags                  | 102                     |
| 10              | Save ADC readings           | 153                     |
| 11              | Do not save anything        | —                       |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

Table 25. RESET State, Flash State, and Reset Reason

| REGISTER ADDRESS | BIT RANGE | DESCRIPTION                                                 |
|------------------|-----------|-------------------------------------------------------------|
| r20h             | [0]       | Reset output state<br>0 = RESET is low<br>1 = RESET is high |
|                  | [1]       | 1 = Flash memory is busy                                    |
|                  | [2]       | 1 = Last reset asserted due to EN going low                 |
|                  | [3]       | 1 = Last reset asserted due to watchdog timeout             |
|                  | [7:4]     | Not used                                                    |

### Applications Information

#### Device Behavior at Power-Up

When  $V_{CC}$  is ramped from 0V, the RESET output is high impedance until  $V_{CC}$  reaches 1.4V, at which point RESET goes low. All other outputs are high impedance until  $V_{CC}$  reaches 2.7V, then the flash contents are copied into register memory. This takes 150 $\mu$ s (max) after which the outputs assume their programmed states.

#### Programming the MAX16068 in Circuit

The MAX16068 can be programmed in the application circuit by taking into account the following points during circuit design:

- The MAX16068 needs to be powered from an intermediate voltage bus or an auxiliary voltage supply so programming can occur even when the board's power supplies are off. This could also be achieved by using ORing diodes so that power can be provided through the programming connector.
- The SMBus or JTAG bus lines should not connect through a bus multiplexer powered from a voltage rail controlled by the MAX16068. If the device needs to be controlled by an on-board  $\mu$ P, consider connecting the  $\mu$ P to one bus (such as SMBus) and use the other bus for in-circuit programming.

#### Maintaining Power During a Fault Condition

Power to the MAX16068 must be maintained for a specific period of time to ensure a successful flash fault log operation during a fault that removes power to the

circuit. Table 25 shows that the amount of time required depends on the settings in the fault control register (r6Dh[1:0]).

Maintain power for shutdown during fault conditions in applications where the always-on power supply cannot be relied upon by placing a diode and a large capacitor between the voltage source,  $V_{IN}$ , and  $V_{CC}$  (Figure 12). The capacitor value depends on  $V_{IN}$  and the time delay required,  $t_{FAULT\_SAVE}$ . Use the following formula to calculate the capacitor size:

$$C = (t_{FAULT\_SAVE} \times I_{CC(MAX)}) / (V_{IN} - V_{DIODE} - V_{UVLO})$$

where the capacitance is in Farads and  $t_{FAULT\_SAVE}$  is in seconds,  $I_{CC(MAX)}$  is 14mA,  $V_{DIODE}$  is the voltage drop across the diode, and  $V_{UVLO}$  is 2.7V. For example, with a  $V_{IN}$  of 14V, a diode drop of 0.7V, and a  $t_{FAULT\_SAVE}$  of 153ns, the minimum required capacitance is 202 $\mu$ F.

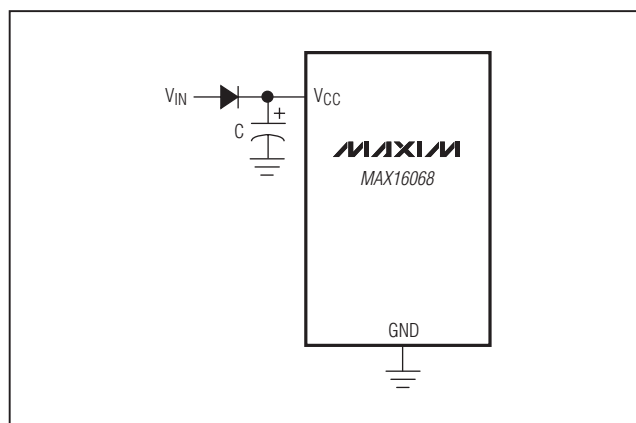


Figure 12. Power Circuit for Shutdown During Fault Conditions

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Configuring the Device

An evaluation kit and a graphical user interface (GUI) are available to create a custom configuration for the device (Figure 13).

Refer to the MAX16068 Evaluation Kit for configuration.

### Cascading Multiple MAX16068s

Multiple MAX16068s can be cascaded to monitor more power supplies. There are many ways to cascade the devices depending on the desired behavior. In general, there are several techniques as follows:

- Configure a GPIO\_ on each device to be `EXTFAULT` (open drain). Externally wire them together with a single pullup resistor. Set register bits `r72h[5]` and `r6Dh[2]` to '1' so that all faults propagate between devices. If a critical fault occurs on one device, `EXTFAULT` asserts,

triggering the nonvolatile fault logger in all cascaded devices and recording a snapshot of all system voltages.

- Connect open-drain RESET outputs together to obtain a master system reset signal.
- Connect all EN inputs together for a master enable signal.

### Layout and Bypassing

Bypass DBP and ABP each with a 1 $\mu$ F ceramic capacitor to GND. Bypass VCC with a 10 $\mu$ F capacitor to ground. Avoid routing digital return currents through a sensitive analog area, such as an analog supply input return path or ABP's bypass capacitor ground connection. Use dedicated analog and digital ground planes. Connect the capacitors as close as possible to the device.

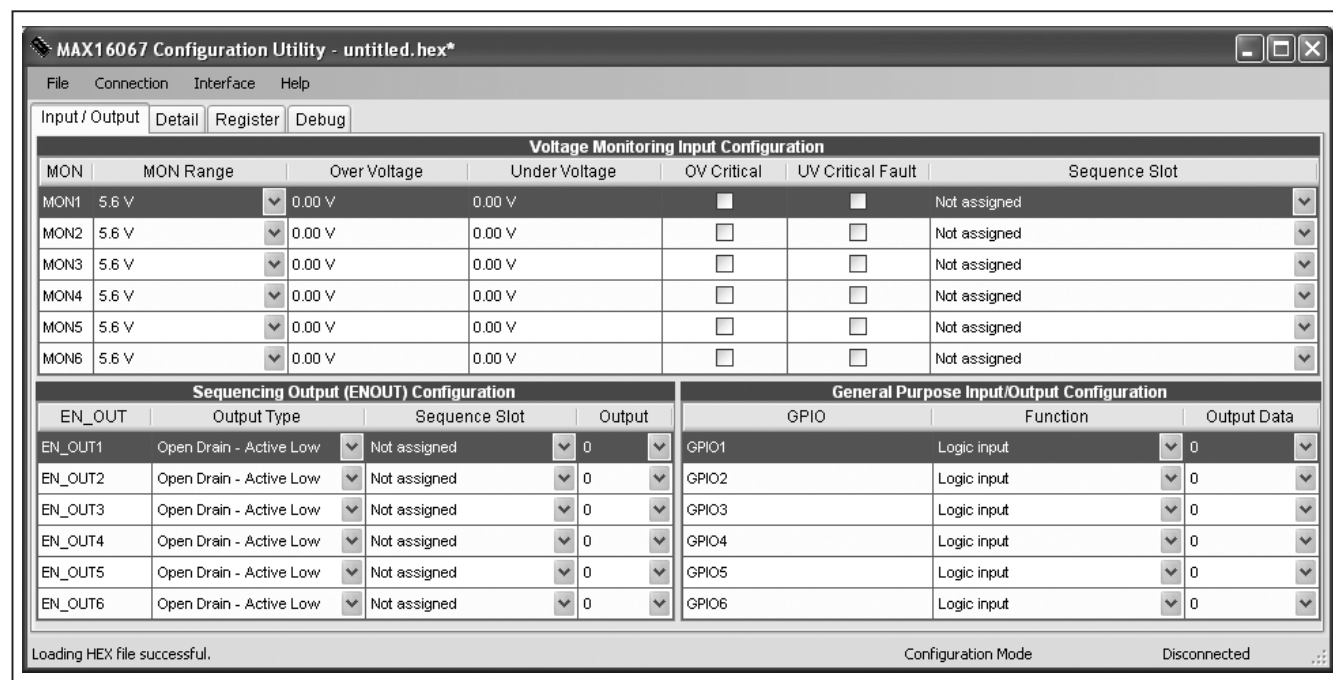


Figure 13. Graphical User Interface Screenshot

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Register Map

| FLASH ADDRESS                                                          | REGISTER ADDRESS | READ/ WRITE | DESCRIPTION                             |
|------------------------------------------------------------------------|------------------|-------------|-----------------------------------------|
| <b>ADC VALUES, FAULT REGISTERS, GPIO_s AS INPUT PORTS—NOT IN FLASH</b> |                  |             |                                         |
| —                                                                      | 000              | R           | MON1 ADC output, MSBs                   |
| —                                                                      | 001              | R           | MON1 ADC output, LSBs                   |
| —                                                                      | 002              | R           | MON2 ADC output, MSBs                   |
| —                                                                      | 003              | R           | MON2 ADC output, LSBs                   |
| —                                                                      | 004              | R           | MON3 ADC output, MSBs                   |
| —                                                                      | 005              | R           | MON3 ADC output, LSBs                   |
| —                                                                      | 006              | R           | MON4 ADC output, MSBs                   |
| —                                                                      | 007              | R           | MON4 ADC output, LSBs                   |
| —                                                                      | 008              | R           | MON5 ADC output, MSBs                   |
| —                                                                      | 009              | R           | MON5 ADC output, LSBs                   |
| —                                                                      | 00A              | R           | MON6 ADC output, MSBs                   |
| —                                                                      | 00B              | R           | MON6 ADC output, LSBs                   |
| —                                                                      | 00C–01A          | —           | Reserved                                |
| —                                                                      | 01B              | R/W         | Fault register—failed line flags        |
| —                                                                      | 01C              | R/W         | Fault register—failed line flags        |
| —                                                                      | 01D              | —           | Reserved                                |
| —                                                                      | 01E              | R           | GPIO_ data in (read only)               |
| —                                                                      | 01F              | —           | Reserved                                |
| —                                                                      | 020              | R/W         | Flash status/reset output monitor       |
| —                                                                      | 021              | —           | Reserved                                |
| <b>GPIO_ AND OUTPUT DEPENDENCIES/CONFIGURATIONS</b>                    |                  |             |                                         |
| 230                                                                    | 030              | —           | Reserved                                |
| 231                                                                    | 031              | —           | Reserved                                |
| 232                                                                    | 032              | —           | Reserved                                |
| 233                                                                    | 033              | —           | Reserved                                |
| 234                                                                    | 034              | —           | Reserved                                |
| 235                                                                    | 035              | —           | Reserved                                |
| 236                                                                    | 036              | R/W         | FAULT dependencies                      |
| 237                                                                    | 037              | R/W         | FAULT dependencies                      |
| 238–23A                                                                | 038–03A          | —           | Reserved                                |
| 23B                                                                    | 03B              | R/W         | RESET output configuration              |
| 23C                                                                    | 03C              | R/W         | RESET output dependencies               |
| 23D                                                                    | 03D              | R/W         | RESET output dependencies               |
| 23E                                                                    | 03E              | R/W         | GPIO data out                           |
| 23F                                                                    | 03F              | R/W         | GPIO configuration                      |
| 240                                                                    | 040              | R/W         | GPIO configuration, ARANEN (ARA Enable) |
| 241–242                                                                | 041–042          | —           | Reserved                                |

## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Register Map (continued)

| FLASH ADDRESS           | REGISTER ADDRESS | READ/ WRITE | DESCRIPTION                             |
|-------------------------|------------------|-------------|-----------------------------------------|
| <b>ADC—CONVERSIONS</b>  |                  |             |                                         |
| 243                     | 043              | R/W         | ADCs voltage ranges for MON_ monitoring |
| 244                     | 044              | R/W         | ADCs voltage ranges for MON_ monitoring |
| 245–247                 | 045–047          | —           | Reserved                                |
| <b>INPUT THRESHOLDS</b> |                  |             |                                         |
| 248                     | 048              | —           | Reserved                                |
| 249                     | 049              | R/W         | MON1 OV threshold                       |
| 24A                     | 04A              | R/W         | MON1 UV threshold                       |
| 24B                     | 04B              | —           | Reserved                                |
| 24C                     | 04C              | R/W         | MON2 OV threshold                       |
| 24D                     | 04D              | R/W         | MON2 UV threshold                       |
| 24E                     | 04E              | —           | Reserved                                |
| 24F                     | 04F              | R/W         | MON3 OV threshold                       |
| 250                     | 050              | R/W         | MON3 UV threshold                       |
| 251                     | 051              | —           | Reserved                                |
| 252                     | 052              | R/W         | MON4 OV threshold                       |
| 253                     | 053              | R/W         | MON4 UV threshold                       |
| 254                     | 054              | —           | Reserved                                |
| 255                     | 055              | R/W         | MON5 OV threshold                       |
| 256                     | 056              | R/W         | MON5 UV threshold                       |
| 257                     | 057              | —           | Reserved                                |
| 258                     | 058              | R/W         | MON6 OV threshold                       |
| 259                     | 059              | R/W         | MON6 UV threshold                       |
| 25A–26C                 | 05A–06C          | —           | Reserved                                |
| <b>FAULT SETUP</b>      |                  |             |                                         |
| 26D                     | 06D              | R/W         | Save after EXTFAULT fault control       |
| 26E                     | 06E              | R/W         | Faults causing store in flash           |
| 26F                     | 06F              | R/W         | Faults causing store in flash           |
| 270                     | 070              | R/W         | Faults causing store in flash           |
| 271                     | 071              | —           | Reserved                                |
| 272                     | 072              | R/W         | EXTFAULT enable                         |


## 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

### Register Map (continued)

| FLASH ADDRESS        | REGISTER ADDRESS | READ/ WRITE | DESCRIPTION                                                                             |
|----------------------|------------------|-------------|-----------------------------------------------------------------------------------------|
| <b>TIMEOUTS</b>      |                  |             |                                                                                         |
| 273                  | 073              | R/W         | Watchdog independent mode, $\overline{\text{MARGIN}}$ enabled, soft RESET functionality |
| 274                  | 074              | R/W         | ADC fault deglitch/autoretry configuration                                              |
| 275                  | 075              | R/W         | WDI toggle/fault timeout, reverse sequencing bit                                        |
| 276                  | 076              | R/W         | WDRESET, WD timers                                                                      |
| 277                  | 077              | R/W         | Boot-up delay                                                                           |
| 278                  | 078              | —           | Reserved                                                                                |
| 279                  | 079              | —           | Reserved                                                                                |
| 27A                  | 07A              | —           | Reserved                                                                                |
| 27B                  | 07B              | —           | Reserved                                                                                |
| 27C                  | 07C              | —           | Reserved                                                                                |
| 27D                  | 07D              | —           | Reserved                                                                                |
| <b>MISCELLANEOUS</b> |                  |             |                                                                                         |
| 27E                  | 07E              | —           | Reserved                                                                                |
| 27F                  | 07F              | —           | Reserved                                                                                |
| 280                  | 080              | —           | Reserved                                                                                |
| 281–283              | 081–083          | —           | Reserved                                                                                |
| 284                  | 084              | —           | Reserved                                                                                |
| 285                  | 085              | —           | Reserved                                                                                |
| 286                  | 086              | —           | Reserved                                                                                |
| 287–289              | 087–089          | —           | Reserved                                                                                |
| 28A                  | 08A              | R/W         | Customer use (version)                                                                  |
| 28B                  | 08B              | R/W         | PEC enable/SMBus address                                                                |
| 28C                  | 08C              | R/W         | Lock bits                                                                               |
| 28D                  | 08D              | R           | Revision code                                                                           |
| <b>USER FLASH</b>    |                  |             |                                                                                         |
| 300                  | 39F              | R/W         | User flash                                                                              |
| 3A0                  | 3AF              | —           | Reserved                                                                                |
| 3B0                  | 3FF              | R/W         | User flash                                                                              |

# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

## Typical Operating Circuit

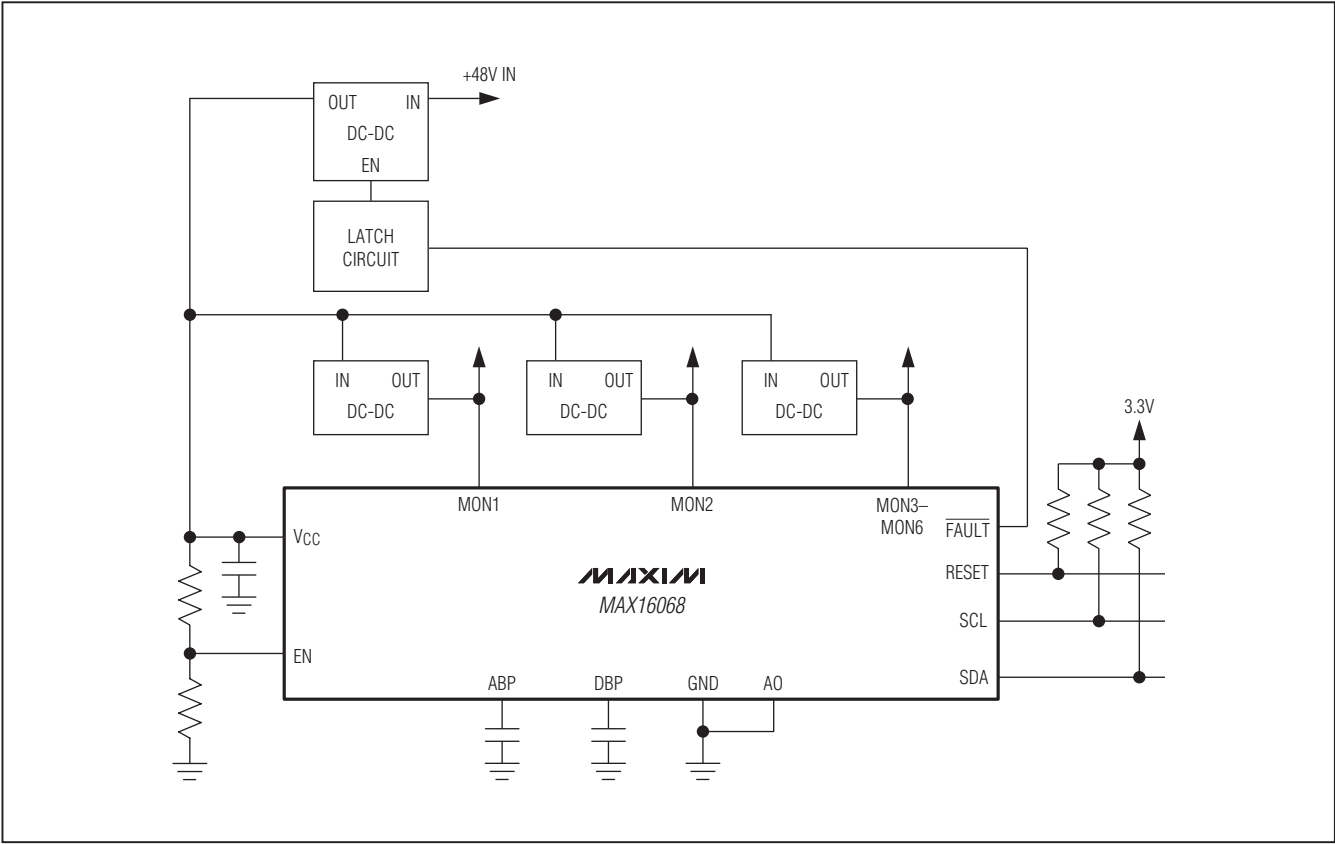

### Chip Information

PROCESS: BiCMOS

### Package Information

For the latest package outline information and land patterns, go to [www.maxim-ic.com/packages](http://www.maxim-ic.com/packages). Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

| PACKAGE TYPE | PACKAGE CODE | OUTLINE NO.             | LAND PATTERN NO.        |
|--------------|--------------|-------------------------|-------------------------|
| 28 TQFN-EP   | T2855+6      | <a href="#">21-0140</a> | <a href="#">90-0026</a> |



# 6-Channel, Flash-Configurable System Manager with Nonvolatile Fault Registers

## Revision History

| REVISION<br>NUMBER | REVISION<br>DATE | DESCRIPTION                                                                                                                                                                                | PAGES<br>CHANGED               |
|--------------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| 0                  | 10/09            | Initial release                                                                                                                                                                            | —                              |
| 1                  | 6/10             | Updated the <i>Absolute Maximum Ratings</i> , <i>Typical Operating Characteristics</i> , <i>Detailed Description</i> and other sections, Table 23, Figure 9, and the <i>Register Map</i> . | 2, 7, 23, 24,<br>28–31, 34, 39 |

MAX16068

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600 \_\_\_\_\_ 41

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Maxim Integrated:](#)

[MAX16068ETI+](#) [MAX16068ETI+T](#)