

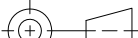
NOTES:

1. OPERATION

1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
2. SWING COVER OFF OF CONTACTS.
3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.

2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

JKL PART NO.: ZFS-CH0-8J

			<div>METRIC</div> <div></div> <div>THIRD ANGLE PROJECTION</div>		<div>DIMENSIONS ARE IN mm (INCHES)</div> <div>TOLERANCE UNLESS OTHERWISE SPECIFIED</div> <div>1 PL +/- REF.</div> <div>2 PL +/- REF.</div> <div>ANGLE +/-</div>		<div>JKL COMPONENTS CORPORATION</div> <div>TITLE NO SOLDER 8mm FLEX TO FLEX TAPE CONNECTOR</div>						
			DRAWN BY L. WENGSTROM		APPV'D BY L.R.		DATE 3/5/13	SIZE A	FSCM NO. 55335	DRAWING NO. ZFS-CH0-8J			
RELEASE & CANCEL PL-1301-04			3/5/13		- CAD DRAWING -		SCALE NONE		RELEASED DATE 3/5/13		REVISION DATE	REV. NO.	SHEET 1 OF 1
REV. NO.			DESCRIPTION/ECO NUMBER		APPV'D DATE		MANUAL REVISIONS NOT PERMITTED						

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[JKL Components:](#)

[ZFS-CH0-8J](#)